

# CLASSIC RADIO CONTROL MODEL CAR INSTRUCTION

 
## 1:10 WPL RC - REALISTIC RC CAR

PLEASE READ CAREFULLY BEFORE USE AND KEEP IT SAFELY FOR FUTURE REFERENCE



### 01 For Safety Precautions

- Contains small parts and risk of suffocation. not suitable for children below 3 years old
- Strictly not for children below 8 years old, to prevent accident For children above 8 years old, requires supervision from adults at all time. Please keep out of reach from children during charging and storage
- Rotating part poses certain risk. To prevent injury, please do not insert finger, hair, cloth and etc in the gap between wheel and body
- Follow below recommended practice,  
Do not operate on busy roads and area with children, to prevent accident  
Do not operate on sandy, water puddle or dust area, to prevent damage  
Do not drive towards pedestrian or animal, to prevent accident
- The model contain sharp objects, please follow the correct operating procedure especially safety for your eyes
- Please do not bend, throw or use excessive force during use, to prevent accident
- If not necessary (ie.upgrade), do not disassemble the product, to prevent damage.
- Do not perform upgrade within 1hr after use to prevent injury from touching the hot motor
- Do not place the product in the water or fire such as gas stove, cooker & etc, to prevent accident

### 02 Packgae Contains

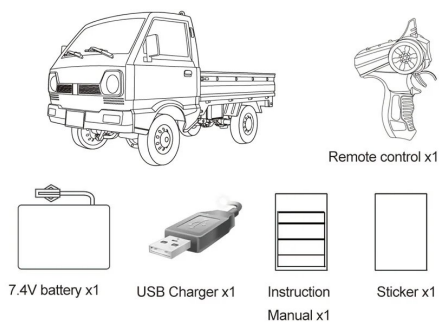


### 03 Sticker Position

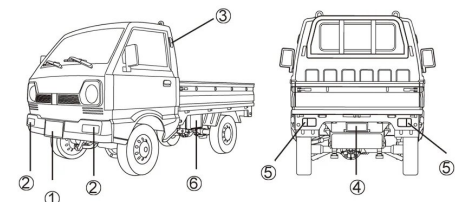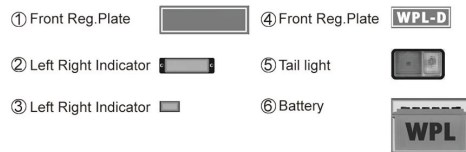  


### 04 Functions

 Note: Please fully charge battery before use

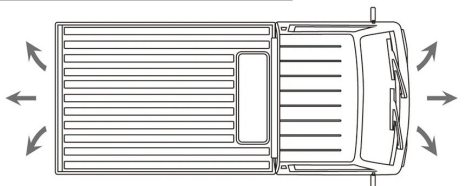


#### ● Binding Procedure

 Turn on the Remote first, then turn on the car, rotate the steering wheel to either direction to complete the binding (Do not touch the throttle before binding is completed)





#### ● Remote Control

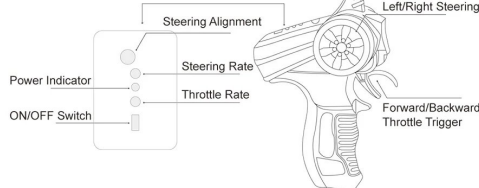 

- Pull throttle trigger to move car forward, push throttle trigger forward to reverse. When you pull the trigger half, car will move slowly forward; when you pull fully, car will move forward at full speed.
- Rotate steering clockwise to steer right; rotate steering counter clockwise to steer left.

#### ● How to- Centering Steering

  While the vehicle is moving forward, if it steers to the left, rotate knob to the right; if it steers to the right, rotate knob to the left.

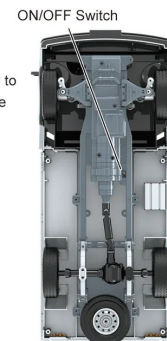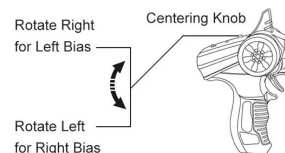

### 05 Service & Maintenance

- Check that all the screws and nuts are properly tightened, clean the wheels and undercarriage before use
- Please replace any severely bent or damage parts immediately
- Inspect and clean moving parts after every use
- When being stored for prolonged period, maintain battery charge at 50-60% to extend battery life and charge once every 3 months to prevent damage to the battery (recommend to store the battery 20mins after use)

### 06 Things to note

- Observe polarity when changing battery
- Do not recharge non-rechargeable battery
- Require adult's supervision during charging
- Do not mix new, used or types of batteries
- Observe radio interference from the surrounding as it may affect radio control range
- If the car is moving slowly, it may means the battery voltage is low, please recharge the battery as instructed above
- If the Power Indicator on the remote is dim or off, the battery may be weak. Please change the battery
- When not in use for prolong period, please switch the remote to OFF position and remove the batteries.

### 07 Troubleshooting

| Problem                    | Cause                                       | Solution                                                                                                       |
|----------------------------|---------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Unable to control the car  | Battery is weak/ voltage low                | Recharge or change to another battery                                                                          |
|                            | Battery is installed incorrectly            | Install battery properly. Notice the polarity                                                                  |
|                            | Switch is at OFF position                   | Ensure switch on the car and remote is at ON position                                                          |
| Car moves slowly           | Battery is weak/ voltage low                | Recharge or change to another battery                                                                          |
|                            | Car is out of control range                 | If the car moves slowly or stopped. Please bring the remote close to the car                                   |
| Car doesn't track straight | Steering alignment is not properly adjusted | Adjust the steering centering knob, if the car steers to the left, rotate the knob to the right and vise versa |
| Headlight flashes slowly   | Pending binding or battery voltage is low   | Perform binding again or change the battery                                                                    |
| Headlight flashes quickly  | Wheels jamming protection                   | Release the throttle and ensure the wheels are free from binding/able to rotate freely                         |

### 08 Basic Parameters

|                 |                                |            |                   |
|-----------------|--------------------------------|------------|-------------------|
| SKU             | D-14                           | Scale      | 1/10              |
| Outer Dimension | 34X16X17CM                     | Drivetrain | Four- Wheel Drive |
| Steering Method | Proportional Steering          |            |                   |
| Battery Spec    | 7.4V 、 600mAh 、 Li-Ion battery |            |                   |