TG VENTURE 18

TOYOTA LAND CRUISER



- En Technical Guide
- De Technischer Leitfaden
- Fr Guide technique
- Es Guía Técnica
- Fi Tekninen Opas
- No Teknisk Veiledning
- Da Teknisk Vejledning
- Sv Teknisk Guide
- Pt Guia Técnico
- It Guida Tecnica
- Tr Teknik Kılavuz
- Ro Ghid Tehnic
- Pl Przewodnik Techniczny
- Cs Technický Průvodce
- Zh 技术指南
- Ja 技術ガイド

hpi racing

161450-006-TG

1

En: Further Information
De: Weitere Informationen
Fr: Informations complémentaires
Es: Más información
Fl: Lisätietoja
No: Mer informasjon
Da: Yderligere information
Sv: Mer information
Pt: Mais informações
It: Ulteriori informazioni
Tr: Daha fazla bilgi
Ro: Informații suplimentare
Pl: Dalsze informacje
Cs: Další informace
Zh: 更多信息
Ja: さらに詳しい情報

QS

En: Quick Start
De: Schnellstart
Fr: Démarrage rapide
Es: Inicio rápido
Fl: Pikakäynnistys
No: Rask oppstart
Da: Hurtig start
Sv: Snabbstart
Pt: Início rápido
It: Avvio rapido
Tr: Hızlı başlangıç
Ro: Pornire rapidă
Pl: Szybki start
Cs: Rychlý start
Zh: 快速入门
Ja: クイックスタート

TG

En: Technical Guide
De: Technischer Leitfaden
Fr: Guide technique
Es: Guía Técnica
Fl: Tekninen Opas
No: Teknisk Veiledning
Da: Teknisk Vejledning
Sv: Teknisk Guide
Pt: Guia Técnico
It: Guida Tecnica
Tr: Teknik Kılavuz
Ro: Ghid Tehnic
Pl: Przewodnik Techniczny
Cs: Technický Průvodce
Zh: 技术指南
Ja: 技術ガイド

SG

En: Startup Guide
De: Startanleitung
Fr: Guide de démarrage
Es: Guía de inicio
Fl: Käynnistysopas
No: Oppstartsguide
Da: Opstartsvejledning
Sv: Startguide
Pt: Guia de inicialização
It: Guida all'avvio
Tr: Başlangıç kılavuzu
Ro: Ghid de pornire
Pl: Przewodnik startowy
Cs: Průvodce spuštěním
Zh: 入门指南
Ja: スタートアップガイド

RM

En: Radio Manual
De: Radiohandbuch
Fr: Manuel de la radio
Es: Manual de radio
Fl: Radiokäyttöopas
No: Radiobruksanvisning
Da: Radiobrugervejledning
Sv: Radiomanual
Pt: Manual do rádio
It: Manuale della radio
Tr: Radyo kılavuzu
Ro: Manual de utilizare radio
Pl: Instrukcja obsługi radia
Cs: Návod k použití rádia
Zh: 接收器说明书
Ja: 送信機取扱説明書

EM

En: ESC Manual
De: ESC-Handbuch
Fr: Manuel ESC
Es: Manual ESC
Fl: ESC-käsikirja
No: ESC-manual
Da: ESC-manual
Sv: ESC-manual
Pt: Manual ESC
It: Manuale ESC
Tr: ESC Kılavuzu
Ro: Manual ESC
Pl: Instrukcja ESC
Cs: Manuál ESC
Zh: 电调手册
Ja: ESC取扱説明書

UG

En: User Guide
De: Benutzerhandbuch
Fr: Guide de l'utilisateur
Es: Guía del usuario
Fl: Käyttöopas
No: Brukerhåndbok
Da: Brugervejledning
Sv: Användarhandbok
Pt: Guia do utilizador
It: Guida utente
Tr: Kullanıcı Kılavuzu
Ro: Ghid de utilizare
Pl: Instrukcja użytkownika
Cs: Uživatelská příručka
Zh: 用户指南
Ja: ユーザーガイド

En: Scan Me
De: Scanne mich
Fr: Scanne-moi
Es: Escanéame
Fl: Skannaa minut
No: Skann meg
Da: Scan mig
Sv: Skanna mig
Pt: Escaneie-me
It: Scansionami
Tr: Beni Tara
Ro: Scanează-mă
Pl: Przeskanuj mnie
Cs: Naskenuj mě
Zh: 扫描二维码
Ja: スキャンして


2

En: Parts List
De: Stückliste
Fr: Nomenclature
Es: Liste des pièces
Fl: Osaluettelo
No: Reservedelsliste
Da: Deleliste
Sv: Reservdelslista
Pt: Lista de peças
It: Elenco dei componenti
Tr: Parça Listesi
Ro: Listă de piese
Pl: Lista części
Cs: Seznam dílů
Zh: 零件清单
Ja: 部品表

Parts #	Description
120298	Button Head Screw M2x6mm (10pcs)
160810	Chassis Rail Set
160811	Axle Housing Set
160812	Steering Spindle & Hub Set
160813	Shock Tower & Chassis Brace Set
160814	Servo Mount Set
160815	Skid Plate & Battery Mount Set
160816	Suspension Link Set
160817	Centre Transmission Gear Box Set
160818	Centre Drive Shaft Set
160820	Differential Spool/Input Gear Set (28/11T)
160821	Centre Gear Box Shaft Set
160822	Transmission Gear Set
160823	Gear Shift Linkage Set
160824	Front CVD Drive Shaft Set
160825	Rear Drive Shaft Set
160826	Complete Suspension Bushing & Pin Set (Venture18)
160827	Complete Bushing Set (Venture18)
160828	Complete Hardware Set (Venture18)
160829	Battery Strap
160830	HPI TF-706 6Ch Transmitter
160831	HPI RF-706 6Ch Receiver
160832	HPI SRL-706 3-in1 ESC/RX/LED Controller
160833	HPI SD-01WR Micro Servo (6.0V/1kg/Plastic Geared)
160834	Micro Crawler Motor 55T (180 Size)
160837	Female JR to Male PicoBlade Servo Adaptor
160838	Plazma 7.4V 600mAh 10C LiPo Battery Pack
160839	7.4V USB LiPo Balance Charger
160860	HPI SD-02MGWR Micro Servo (6.0V/1.5kg/Metal Geared)
160861	RL-700 LED Light Control Unit
160862	FLX18-1621-3500KV Outrunner Brushless Motor
160864	Oil-Filled Shock Set V2 (Assembled/4pcs)
160865	Tredz Trailblaster Tire 64x23/1.2in (4pcs)
160878	Pinion Gear 11T (0.4M / 2mm)
160967	FLX18-3S20-WP-T Flux ESC with XT-30
161171	Shock Rebuild Set
161175	TP. Button Head Screw M1.4x6mm (10pcs)
161176	TP. Button Head Screw M1.7x5mm (Hex Socket/10pcs)
161177	Button Head Screw M1.7x5mm (Hex Socket/10pcs)
161178	Button Head Screw M1.7x7mm (Hex Socket/10pcs)
161179	Button Head Screw M1.7x10mm (Hex Socket/10pcs)
161180	Button Head Screw M2x4mm (Hex Socket/10pcs)
161182	Button Head Screw M2x10mm (Hex Socket/10pcs)
161184	Button Head Screw M2x16mm (Hex Socket/10pcs)
161185	Button Head Screw M2x26mm (Hex Socket/10pcs)
161186	Flat Head Screw M1.7x6mm (Hex Socket/10pcs)
161187	Lock Nut M2 (Black/4pcs)
161188	Lock Nut M2.5 (Black/4pcs)
161189	Pin 1x5mm (Hex Socket/10pcs)
161190	Pin 1.5x6mm (Hex Socket/10pcs)
161191	M3x5x0.2 Shim (10pcs)
161192	Top Hat Bushing 4x3.4mm (4pcs)
161193	Pivot Ball 4x6.8mm (10pcs)
161194	Pivot Ball 4x4.8mm (10pcs)
161195	Ball Stud 4x8mm (10pcs)
161196	Double Ball Stud 4x14mm (2pcs)
161238	Shock Spring 10x33x0.6mm 14.5 Coils (Medium)
161449	CM-10 Beadlock Wheel 1.2in (Black/4pcs)
161454	Toyota Land Cruiser LC250 Painted Body Heritage Blue
161455	Toyota Land Cruiser LC250 Painted Body Trail Dust
161456	Toyota Land Cruiser LC250 Clear Body
161457	Bumper and Grille Set
161458	Tailgate & Side Rail Set
161459	Dashboard & Wing Set
161460	LC250 Body Accessory Set
161461	Roof Rack Set
161462	Canopy Set
161463	Roof Light Set
161464	LC250 Lens Set
161745	Venture18 Roof Light LED Kit Type3
161746	Venture18 LED Kit Type2 (PicoBlade)
161747	Venture18 LED Kit Type2 (JR)
161748	Button Head Screw M1.2x4mm (10pcs)
161749	Button Head Screw M1.4x4mm (10pcs)

3


En: Exploded Views
De: Explosionszeichnung
Fr: Vue éclatée
Es: Vista explosionada
Fl: Räjäytyskuva
No: Sprengskisse
Da: Eksploderet visning
Sv: Exploderad vy
Pt: Vista explodida
It: Vista esplosa
Tr: Patlatılmış Görünüm
Ro: Vedere explodată
Pl: Widok rozłożony
Cs: Rozložený pohled
Zh: 爆炸图
Ja: 分解図

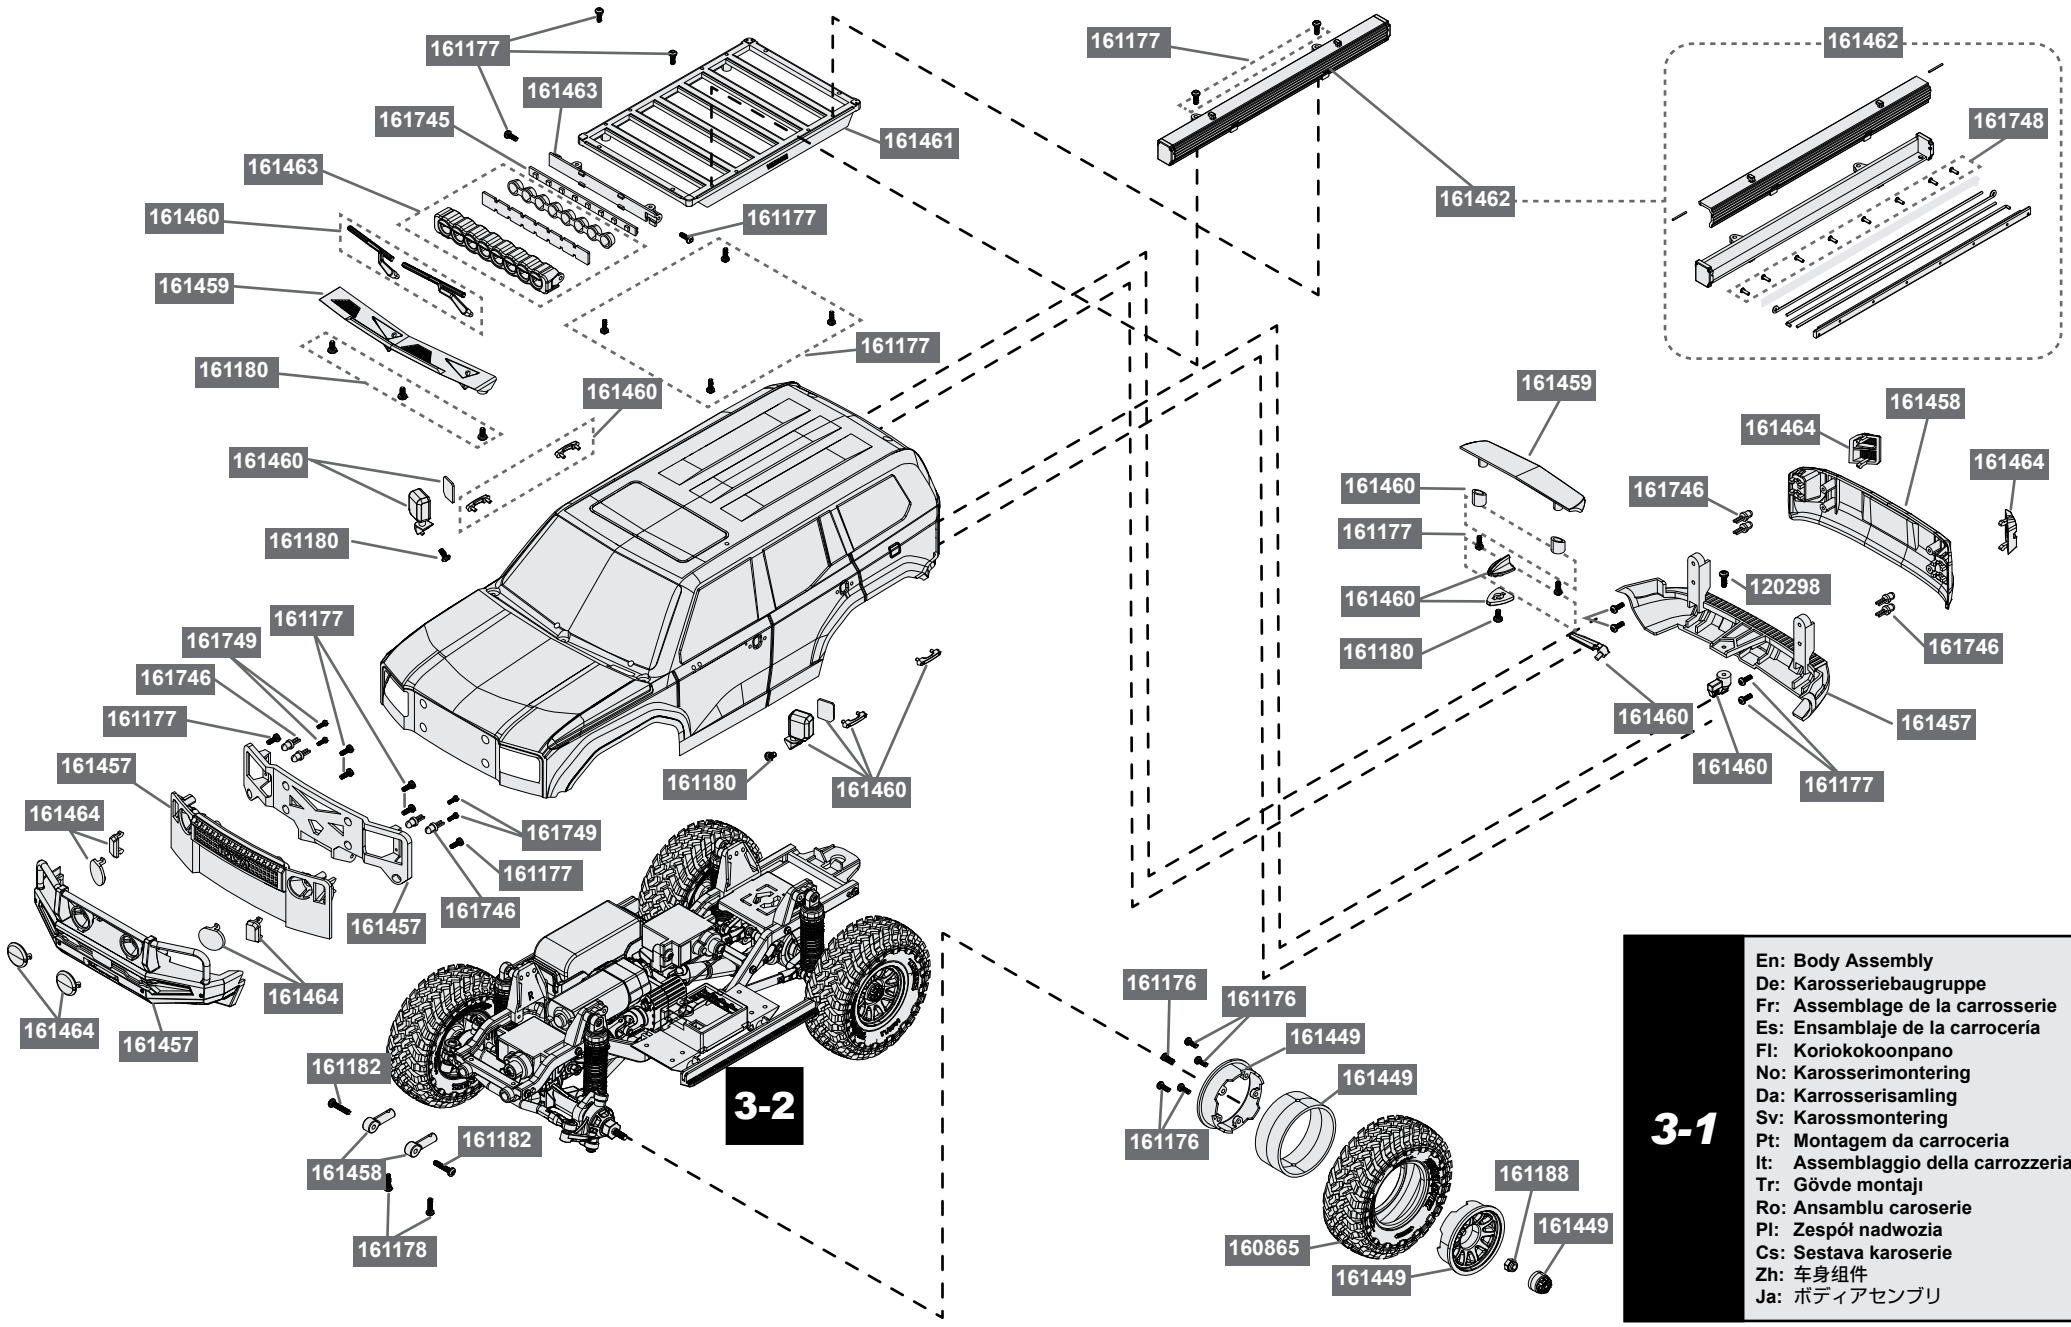

En: Body Assembly
De: Karosseriebaugruppe
Fr: Assemblage de la carrosserie
Es: Ensamblaje de la carrocería
Fl: Koriokokoonpano
No: Karosserimontering
Da: Karrosserisamling
Sv: Karossmontering
Pt: Montagem da carroceria
It: Assemblaggio della carrozzeria
Tr: Gövde montajı
Ro: Ansamblu caroserie
Pl: Zespół nadwozia
Cs: Sestava karoserie
Zh: 车身组件
Ja: ボディアセンブリ


3-2

En: Main Components
De: Hauptkomponenten
Fr: Composants principaux
Es: Componentes principales
Fl: Pääkomponentit
No: Hovedkomponenter
Da: Hovedkomponenter
Sv: Huvudkomponenter
Pt: Componentes principais
It: Componenti principali
Tr: Ana bileşenler
Ro: Componente principale
Pl: Główne komponenty
Cs: Hlavní komponenty
Zh: 主要组件
Ja: 主要部品

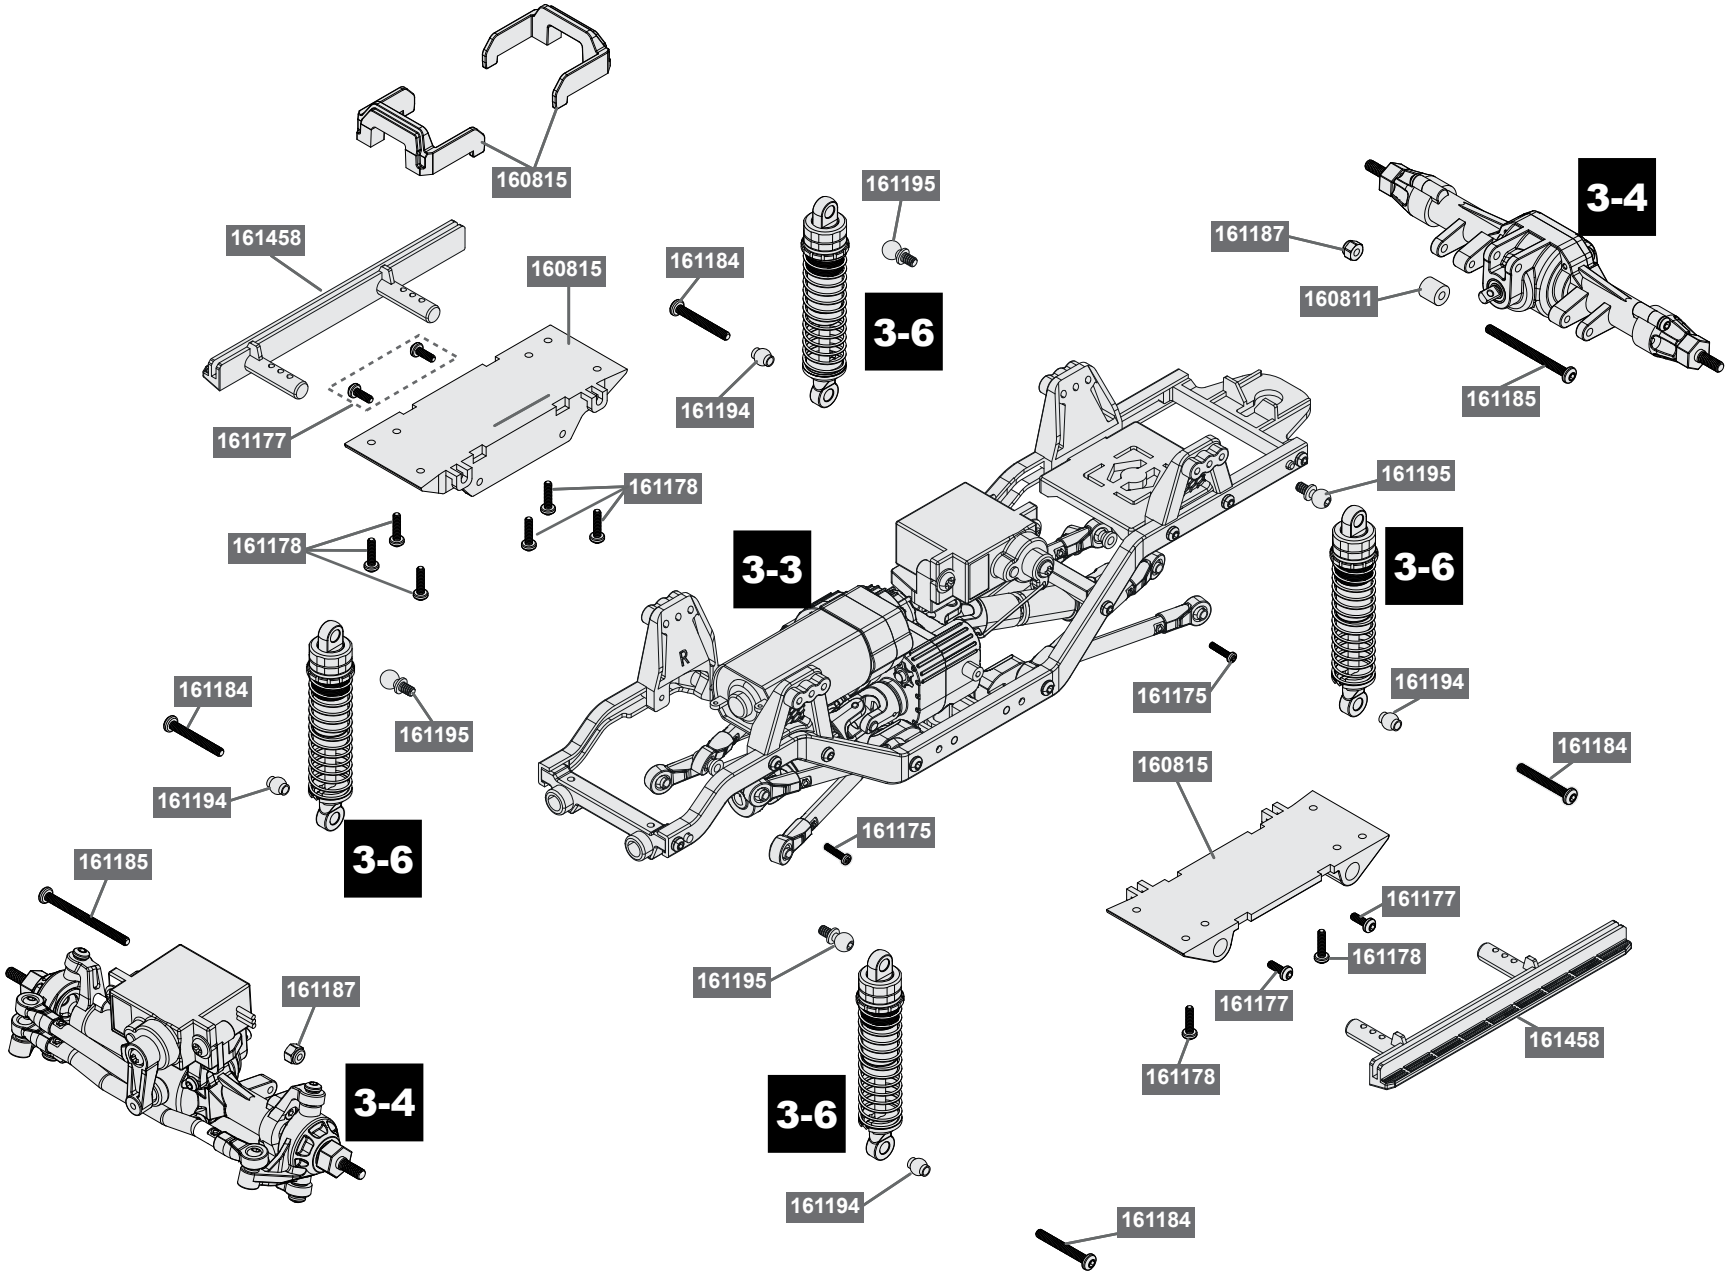


3-3

En: Chassis Assembly	Fl: Alustan kokoonpano	Pt: Montagem do chassi	Pl: Montaż podwozia
De: Fahrgestellmontage	No: Chassismontering	It: Assemblaggio del telaio	Cs: Montáž podvozku
Fr: Assemblage du châssis	Da: Chassis samling	Tr: Şasi montajı	Zh: 底盘组装
Es: Montaje del chasis	Sv: Chassimontering	Ro: Asamblare șasiu	Ja: シャーシ組立

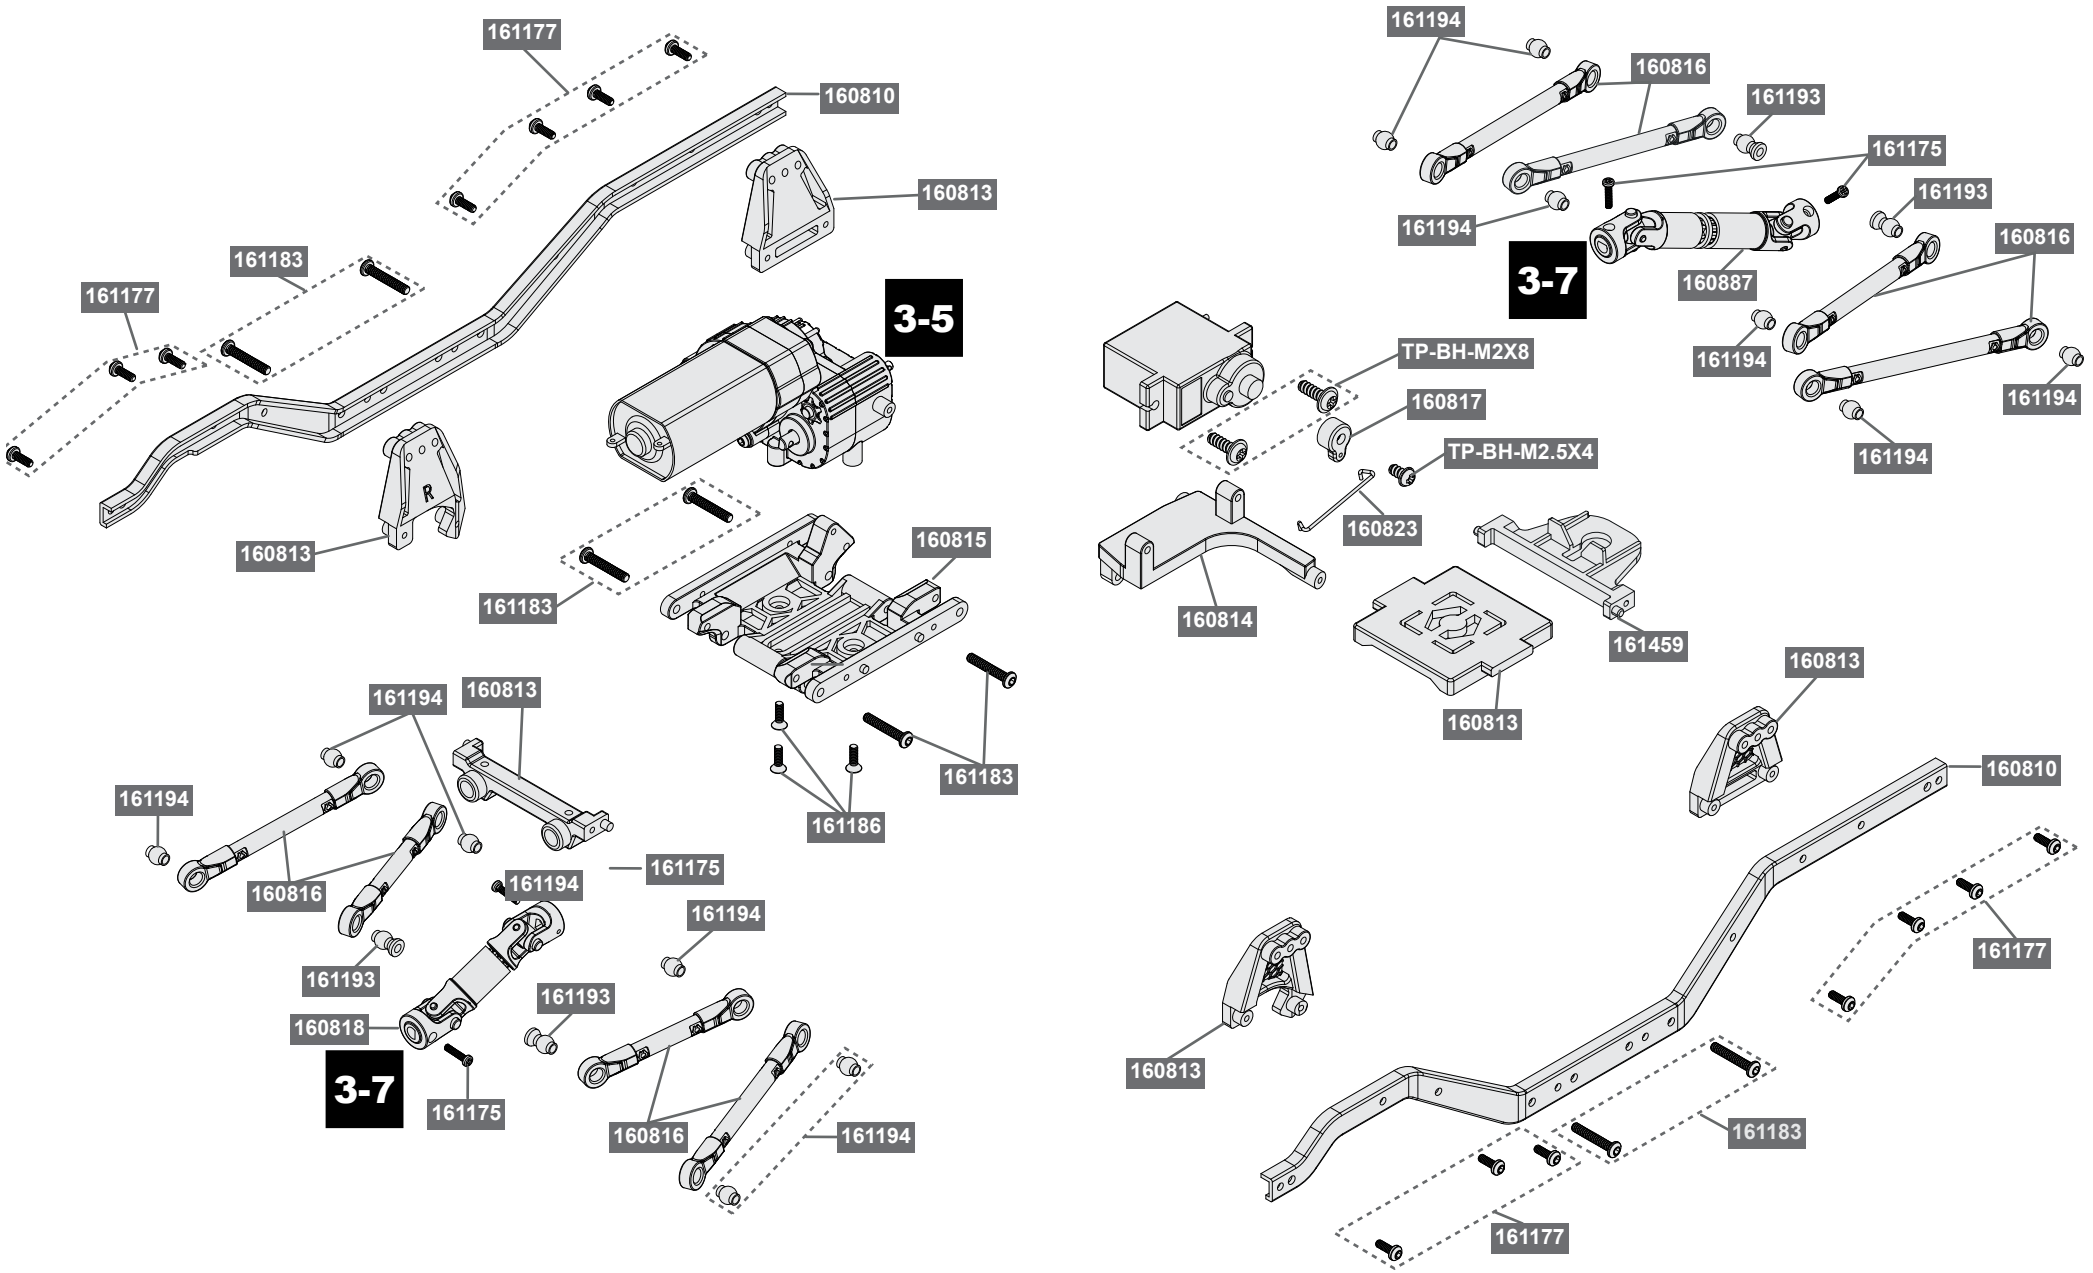


3-4

En: Front/Rear Assembly
De: Vorder-/Hinterbau
Fr: Assemblage avant/arrière
Es: Montaje delantero/trasero
Fl: Etu-/takaosa
No: For-/bakmontering
Da: For-/bagmontering
Sv: Fram-/bakmontering
Pt: Montagem frontal/traseira
It: Assemblaggio anteriore/posteriore
Tr: Ön/arka montajı
Ro: Ansamblu față/spate
Pl: Montaż przedni/tylny
Cs: Přední/zadní sestava
Zh: 前/后组件
Ja: 前部/後部アセンブリ

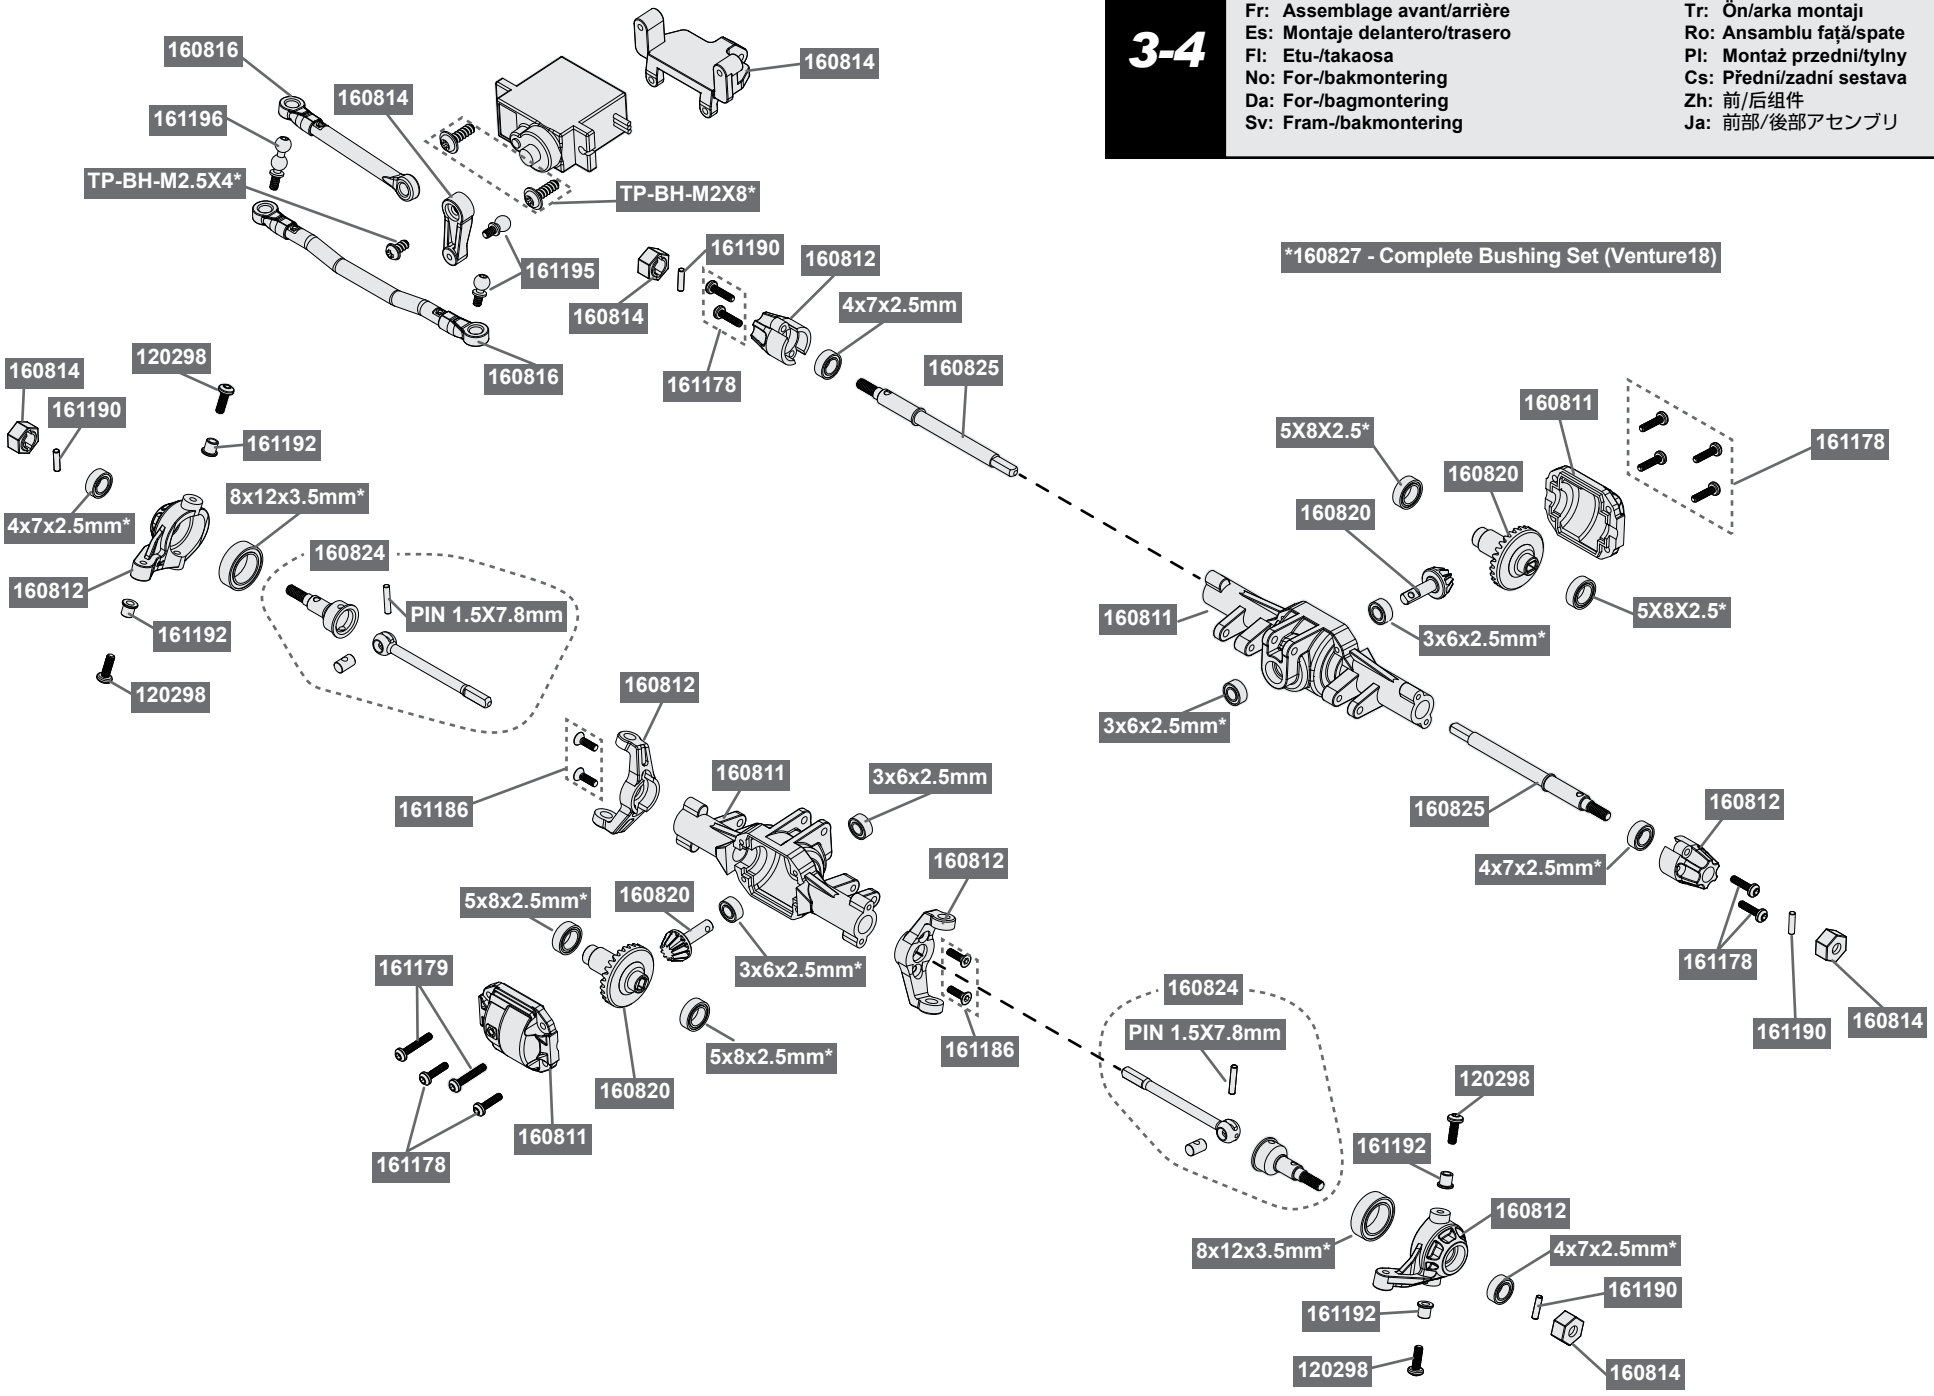

3-5


En: Transmission Assembly	Fl: Vaihteiston kokoonpano	Pt: Montagem da transmissão	Pl: Zespół skrzyni biegów
De: Getriebeeinheit	No: Girkassemontering	It: Assemblaggio della trasmissione	Cs: Sestava převodovky
Fr: Assemblage de transmission	Da: Gearkassemontering	Tr: Şanzıman montajı	Zh: 变速器组件
Es: Montaje de transmisión	Sv: Växellådsmontering	Ro: Ansamblu transmisie	Ja: トランスミッションアセンブリ

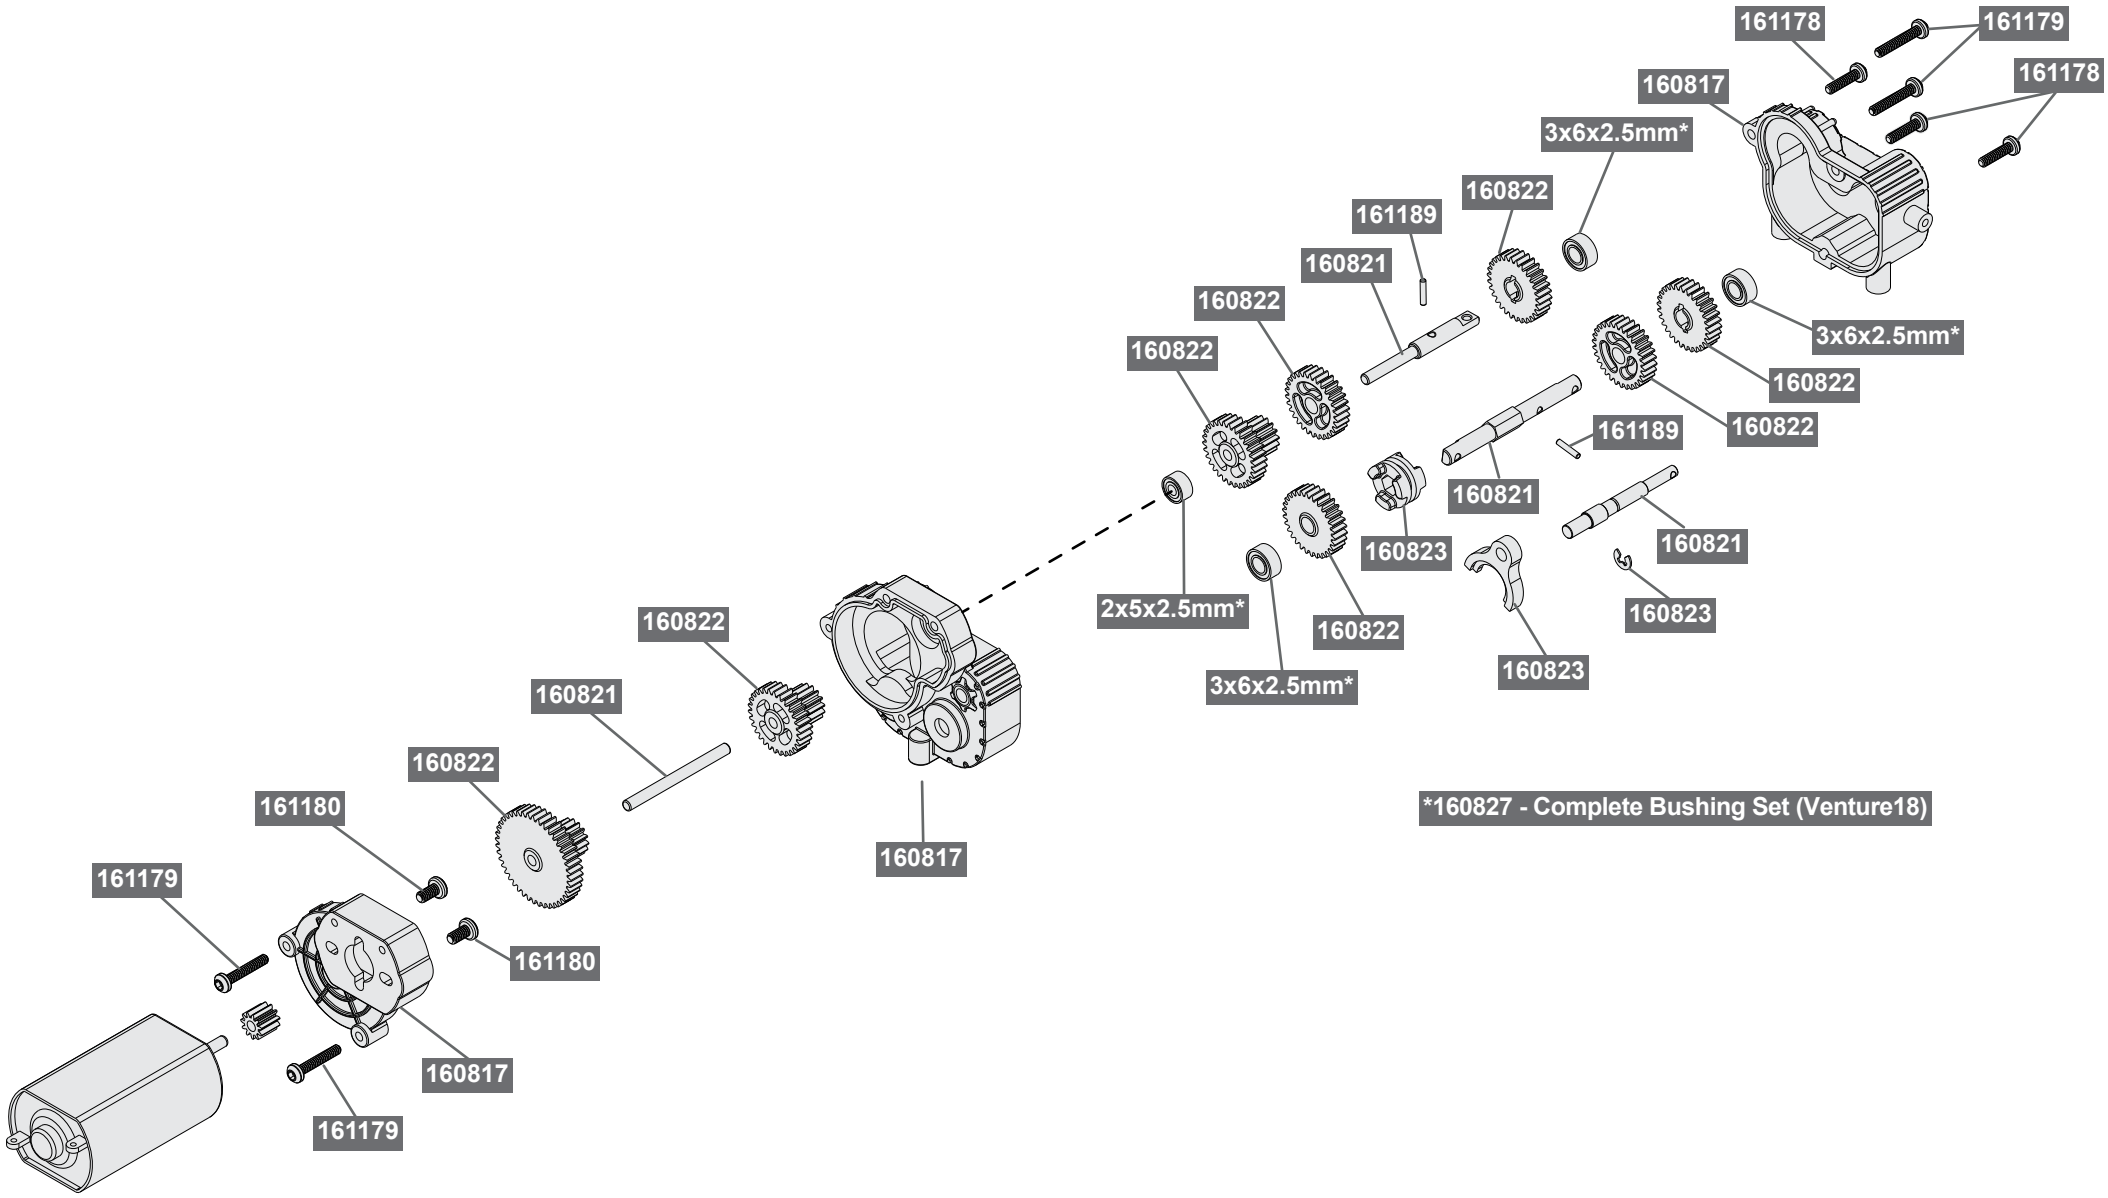

*160827 - Complete Bushing Set (Venture18)


3-6

En: Shock Assembly
De: Stoßdämpfer-Montage
Fr: Assemblage de l'amortisseur
Es: Montaje del amortiguador
Fl: Iskunvaimennin kokoonpano
No: Støtdempermontering
Da: Støddæmper samling
Sv: Stötdämparmontering
Pt: Montagem do amortecedor
It: Assemblaggio dell'ammortizzatore
Tr: Amortisör montajı
Ro: Asamblare amortizor
Pl: Montaż amortyzatora
Cs: Montáž tlumiče
Zh: 缓冲器组装
Ja: ショックアセンブリ

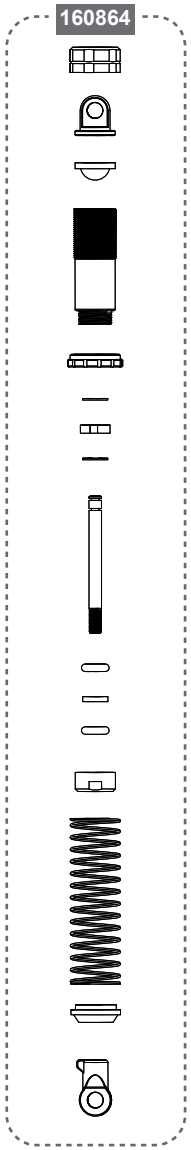

3-7

En: Driveshaft Assembly
De: Antriebswellen-Montage
Fr: Assemblage de l'arbre de transmission
Es: Montaje del eje de transmisión
Fl: Vetoakselin asennus
No: Montering av drivaksel
Da: Samling af drivaksel
Sv: Montering av drivaxel
Pt: Montagem do veio de transmissão
It: Assemblaggio dell'albero di trasmissione
Tr: Tahrik mili montajı
Ro: Asamblarea arborelui de transmisie
Pl: Montaż wału napędowego
Cs: Montáž hnací hřídele
Zh: 传动轴组装
Ja: ドライブシャフトの組み立て

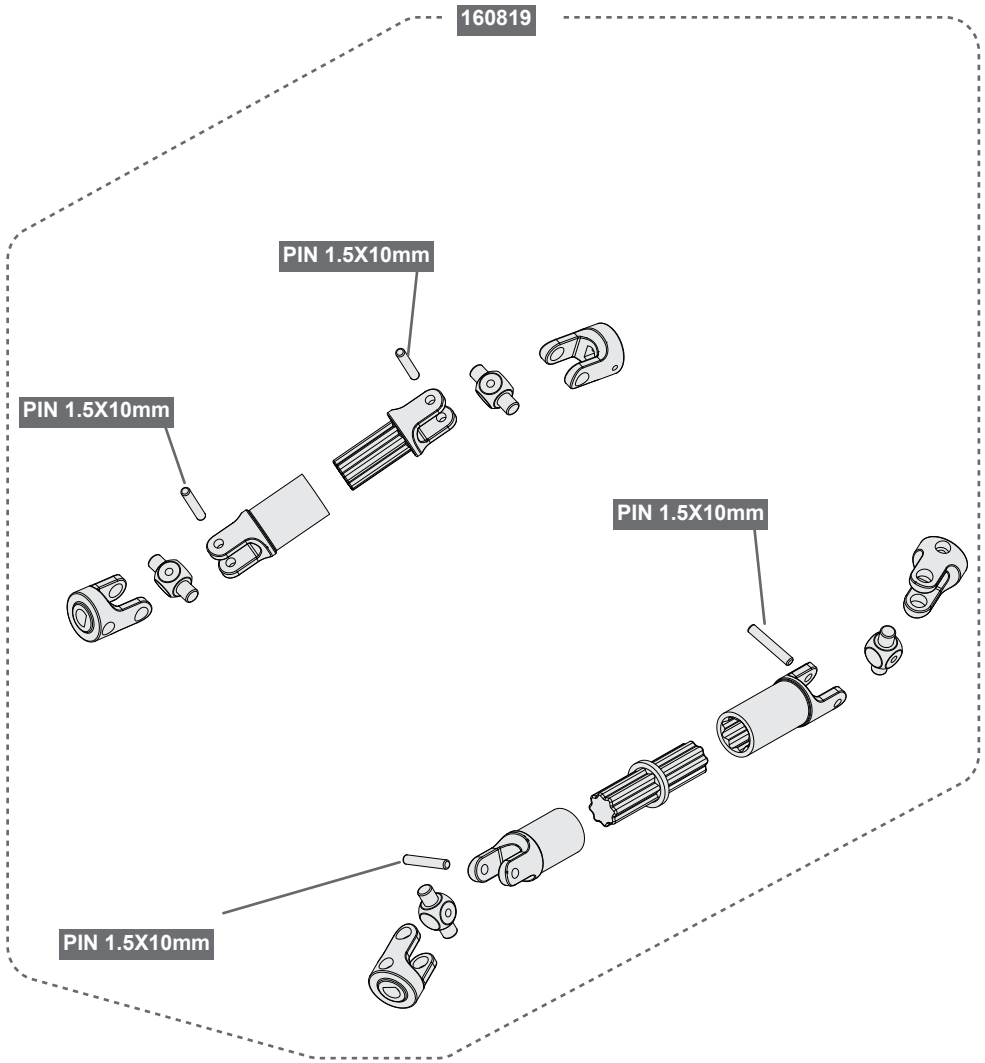



HPI RACING A/S

www.hpiracing.com
HPI Racing A/S
Jegindøvej 21
DK - 8800 Viborg
Denmark
Email: info@hpiracing.com

Serial Number
Seriennummer
Numéro de série
シリアルナンバー