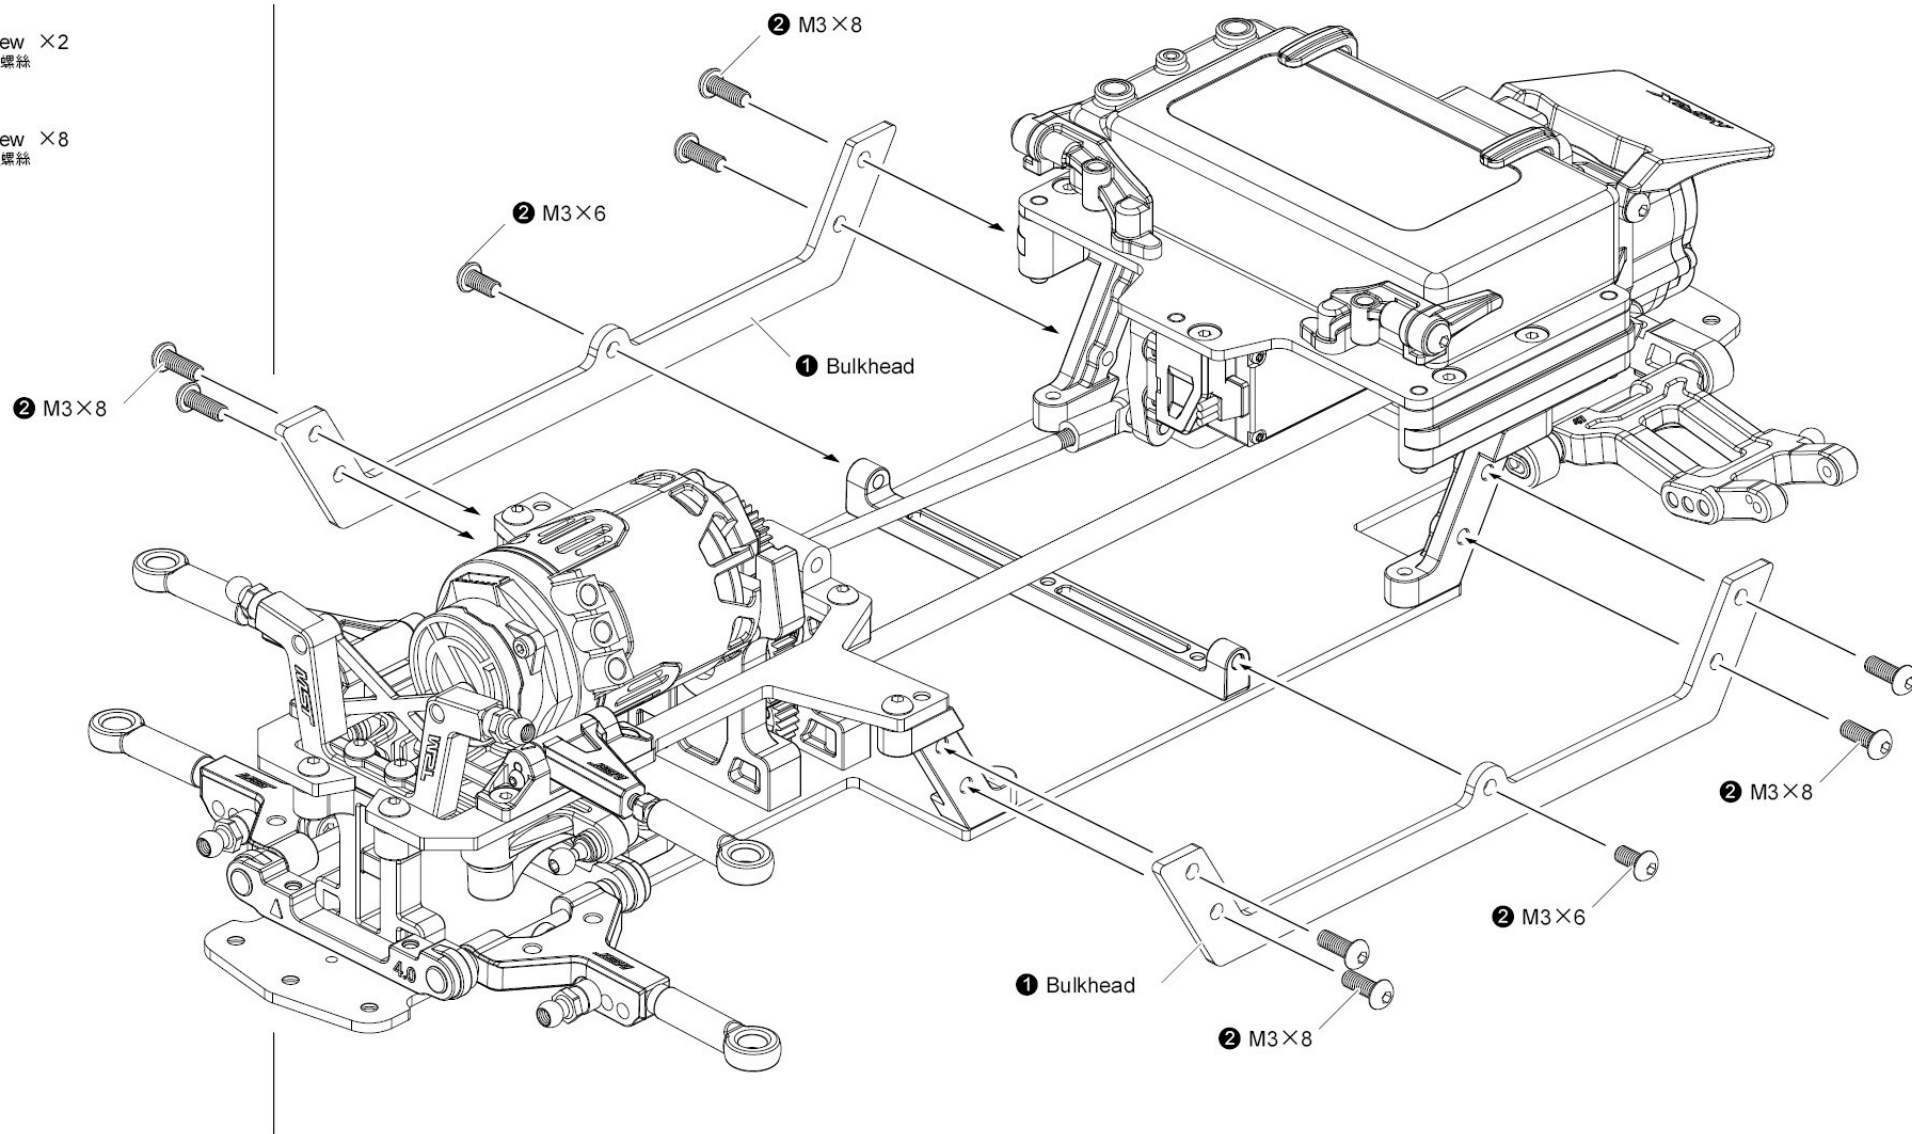


STEP 1

Bulkhead assembly

側板組裝

Bulkhead ×2
側板M3×6 screw ×2
圓頭螺絲M3×8 screw ×8
圓頭螺絲

STEP 1 Rear upper turnbuckle assembly
後上拉桿組裝

4.8 Ball connector ×2
外六角球頭

4.8 Ball connector L ×2
外六角球頭


M3×8 screw ×2
圓頭螺絲

M3×10 screw ×4
圓頭螺絲

M3×28 Turnbuckle ×2
可調拉桿



4.8 Adjuster M ×4
拉桿頭

Bag 5


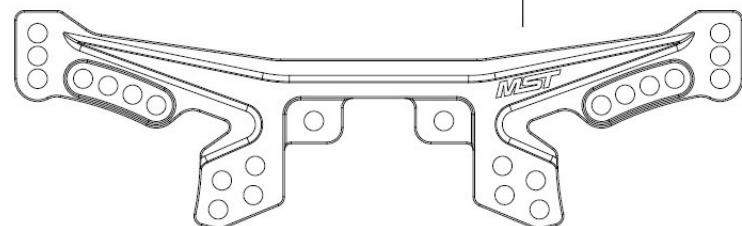


Rear damper stay ×1
後避震架


Bag 4


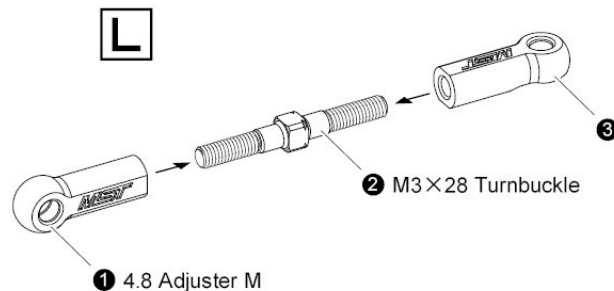


※ Please use a caliper for precise measurements.
請使用卡尺進行精確測量

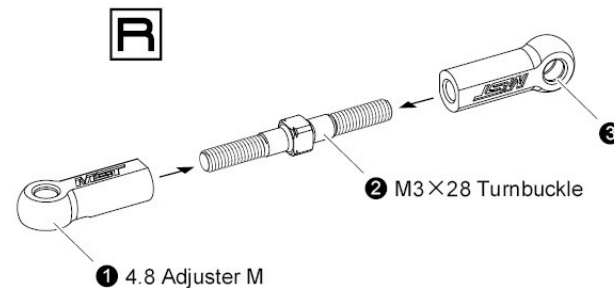


STEP 2 Attaching rear damper stay
安裝後避震架

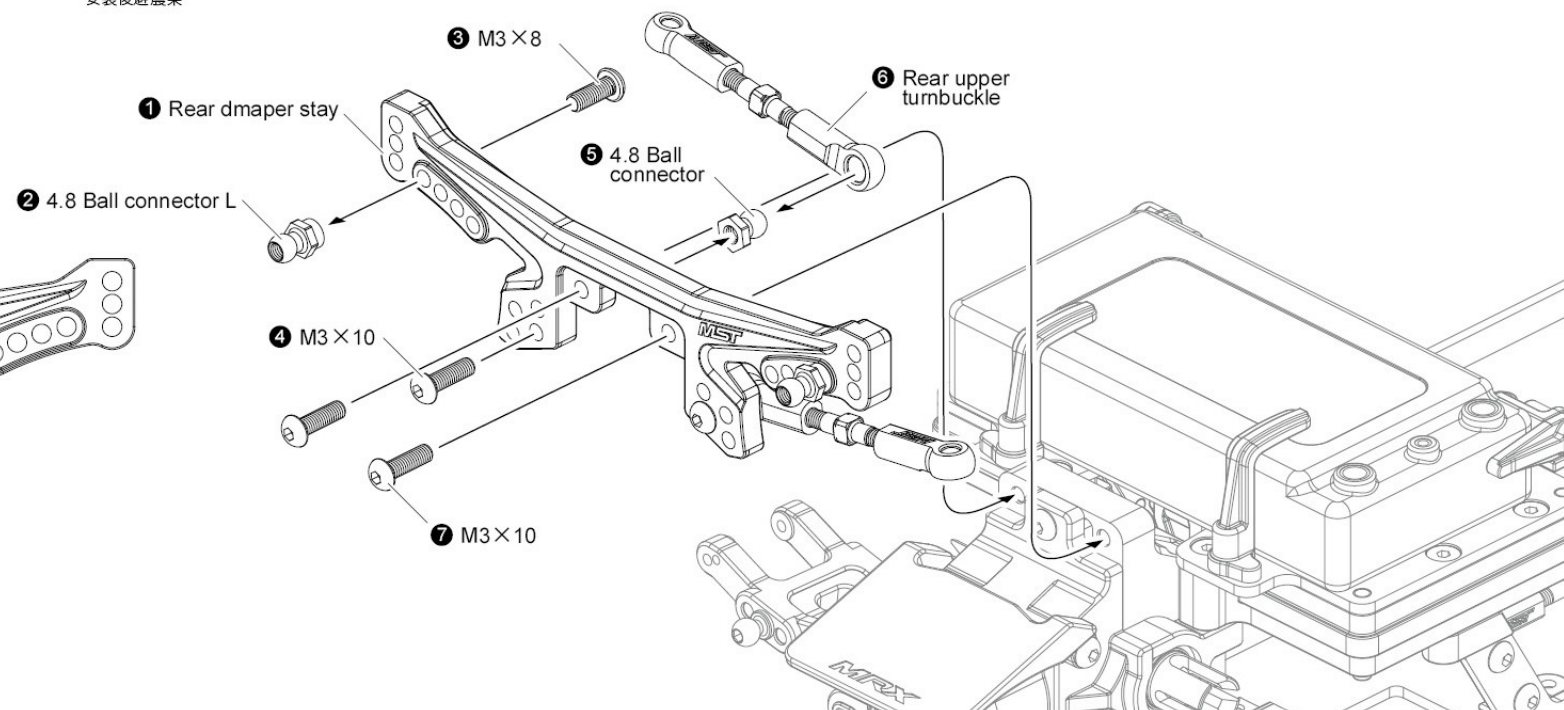


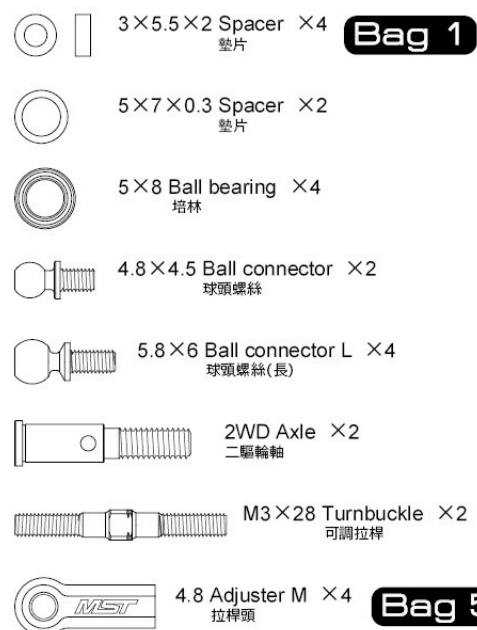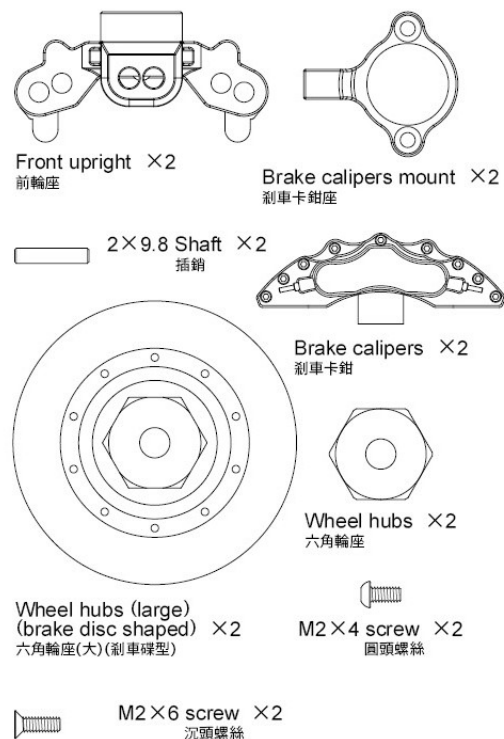


STEP 1 Front axle assembly
前輪座組裝


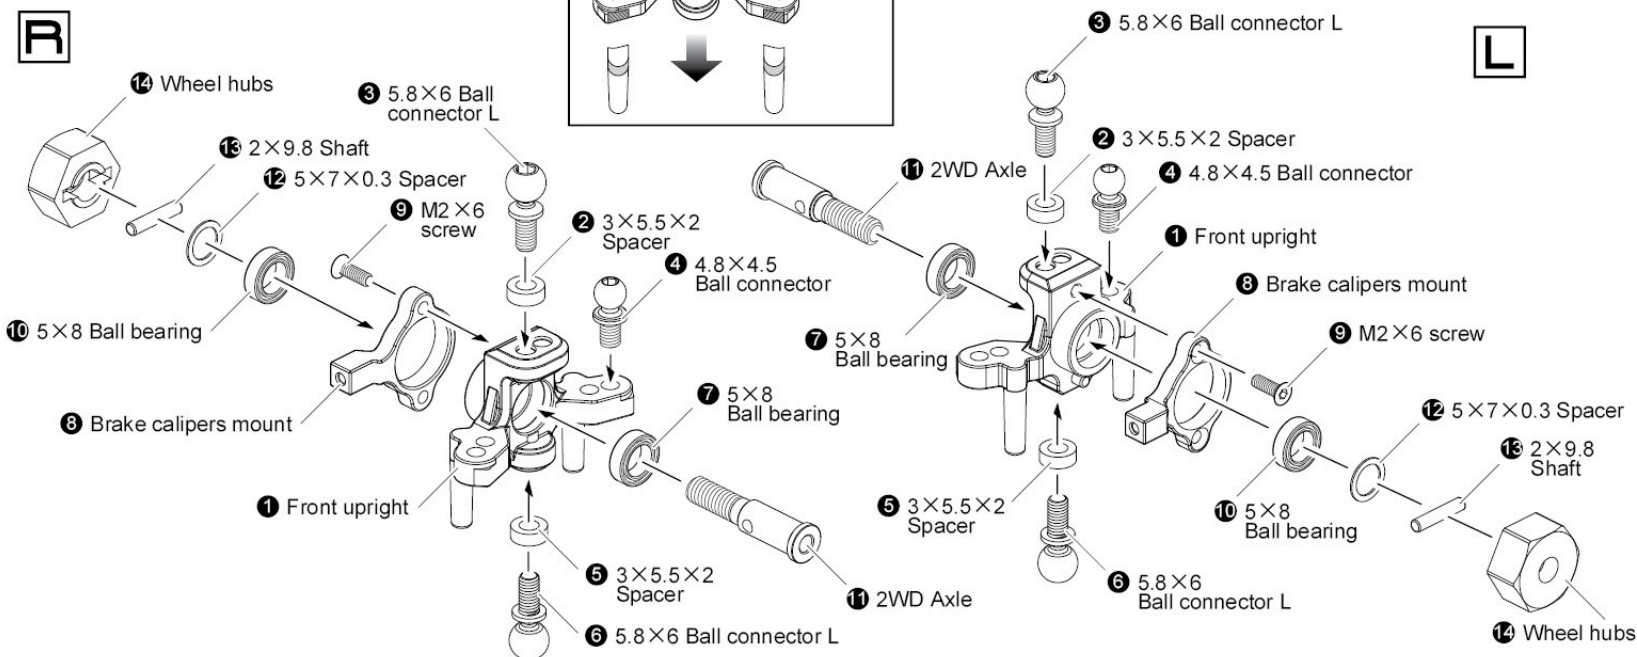



STEP 1 Wheel hubs assembly
(Brake disc shaped)
煞車碟盤型輪座組裝

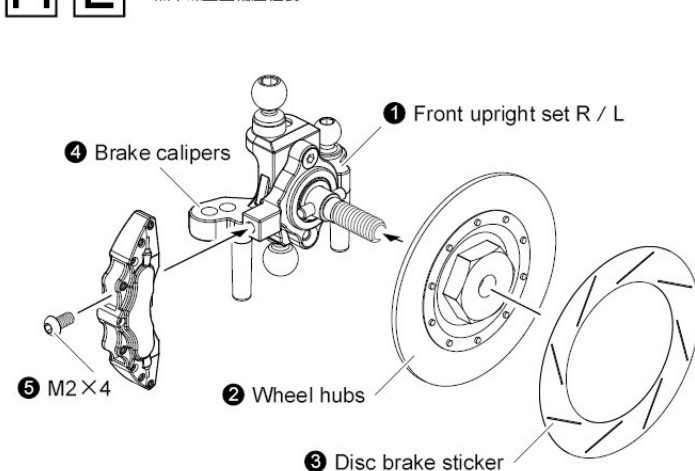


STEP 2 Steering adjuster assembly
轉向拉桿組裝

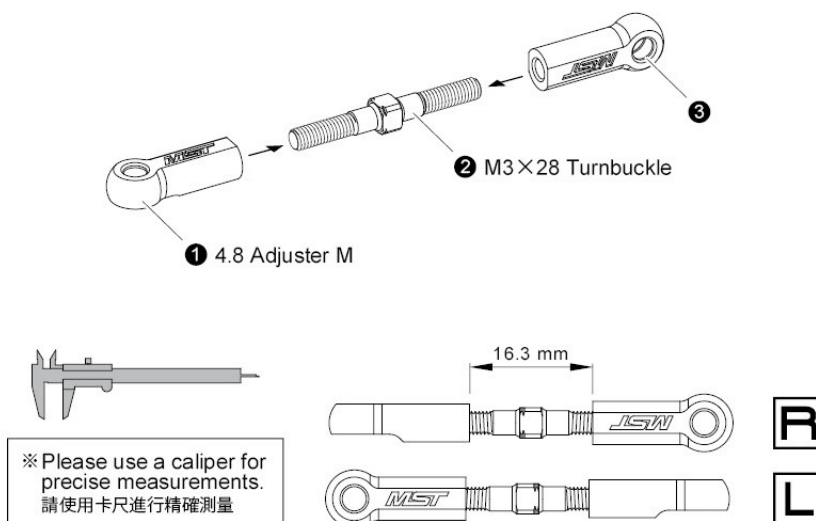

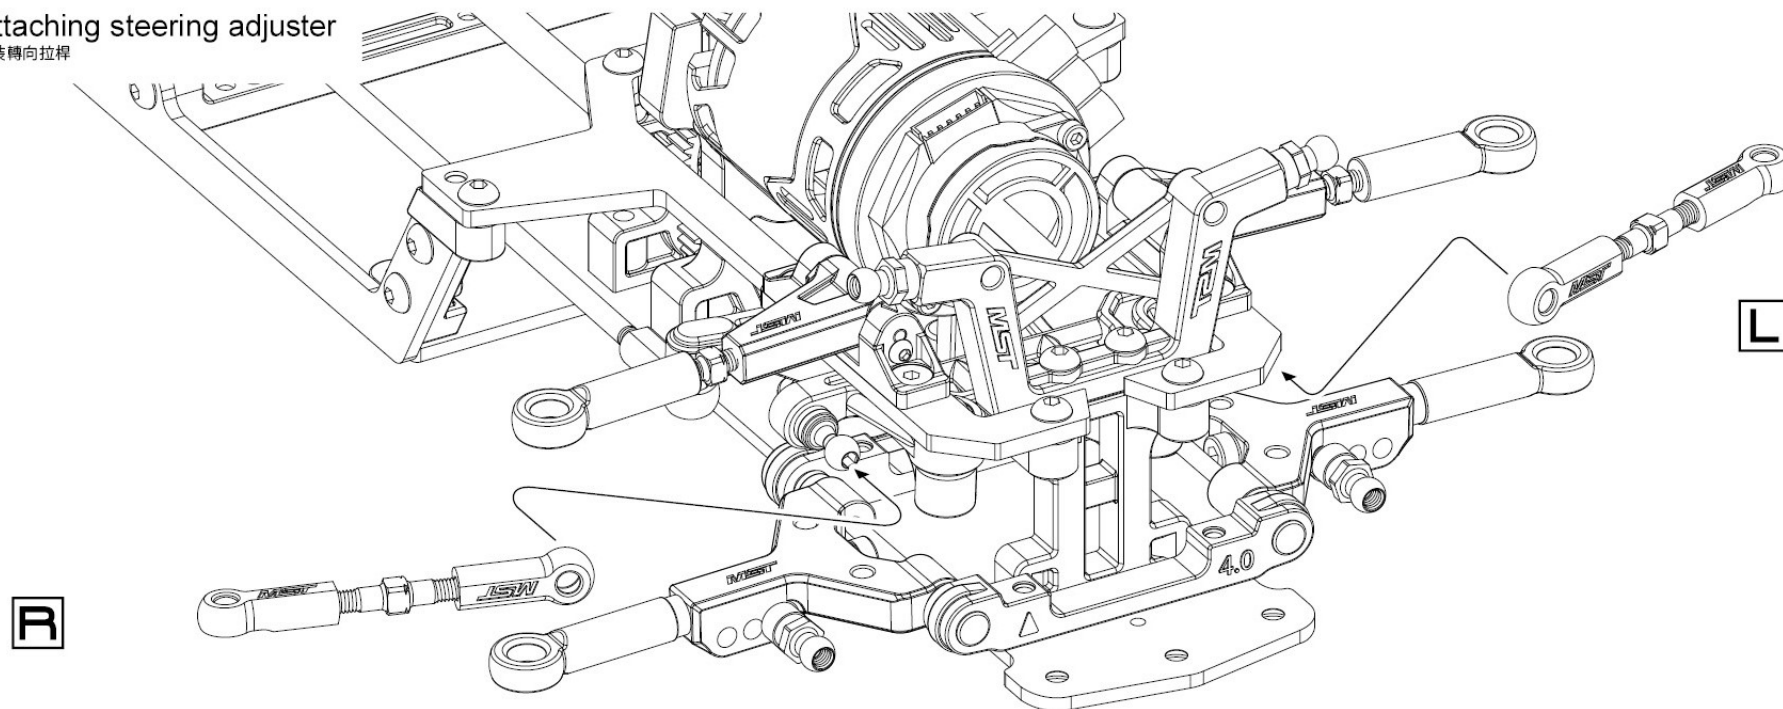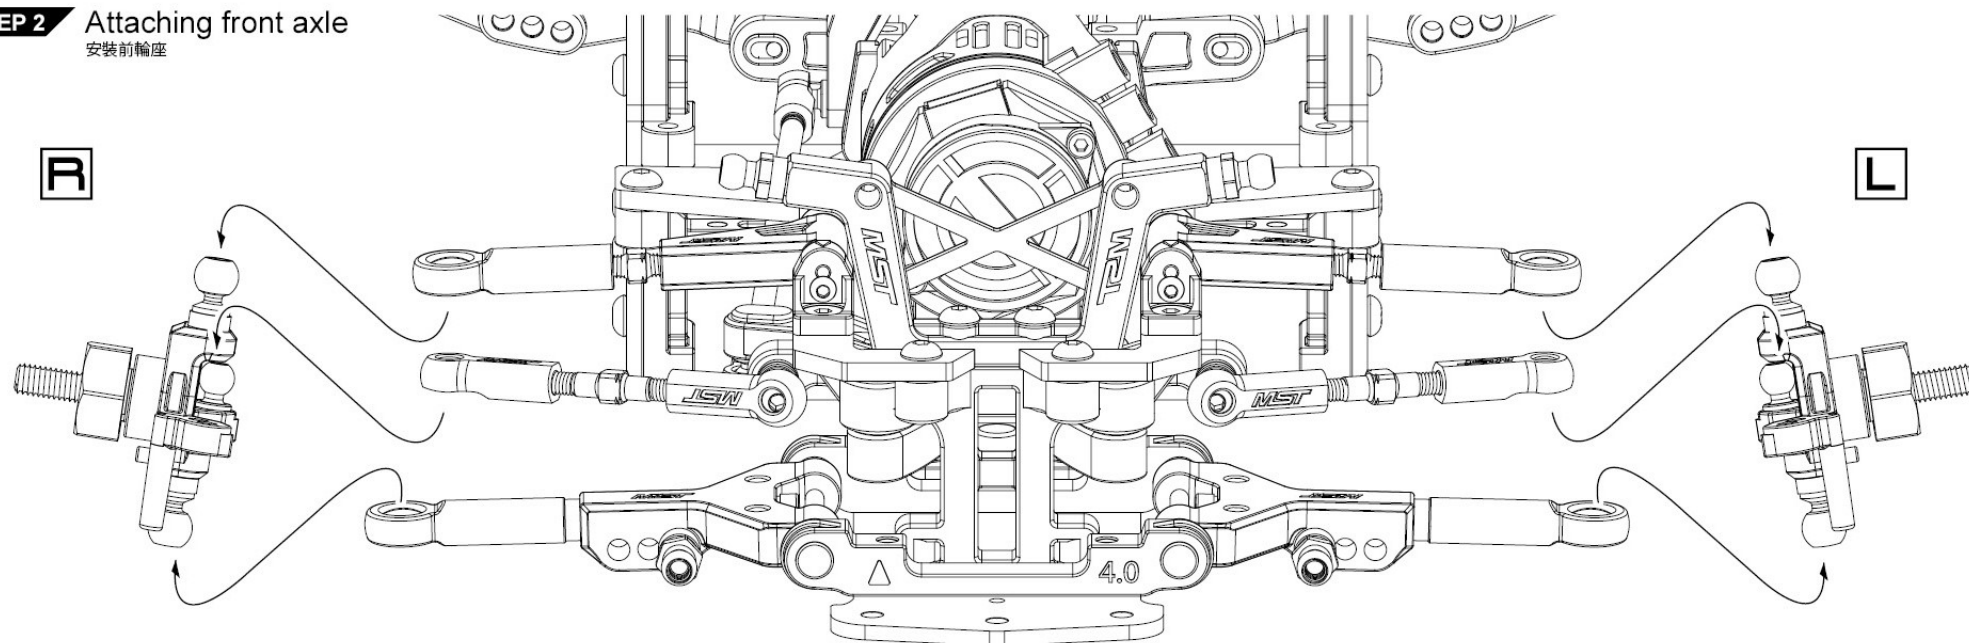STEP 1 Attaching steering adjuster
安裝轉向拉桿**STEP 2** Attaching front axle
安裝前輪座

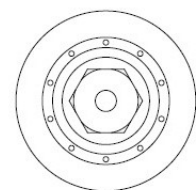


Wheel hubs (small)
(brake disc shaped) ×2
六角輪座(小)(剎車碟型)

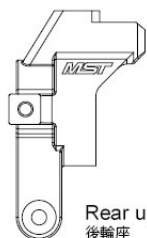

Rear upright ×2
後輪座



Steel CVD universal shaft 38.5 ×2
鋼製CVD傳動軸 38.5



Wheel axle ×2
萬向接杆



Brake calipers ×2
剎車卡鉗



4.8 Ball connector L ×2
外六角球頭(長)



Wheel hubs ×2
六角輪座



Cross joint ×2
連接軸



M2×3 screw ×4
圓頭螺絲



M2×4 screw ×2
圓頭螺絲



M3×2.6 screw ×2
止付螺絲



M3×12 screw ×2
止付螺絲



2×9.8 Shaft ×2
插銷



2×9.8 Shaft ×2
插銷



2×22 Shaft ×2
插銷



5×7×0.1 Spacer ×2
墊片




5×10 Ball bearing ×4
培林


STEP 1 Rear axle assembly

後輪座組裝

X2
Make 2


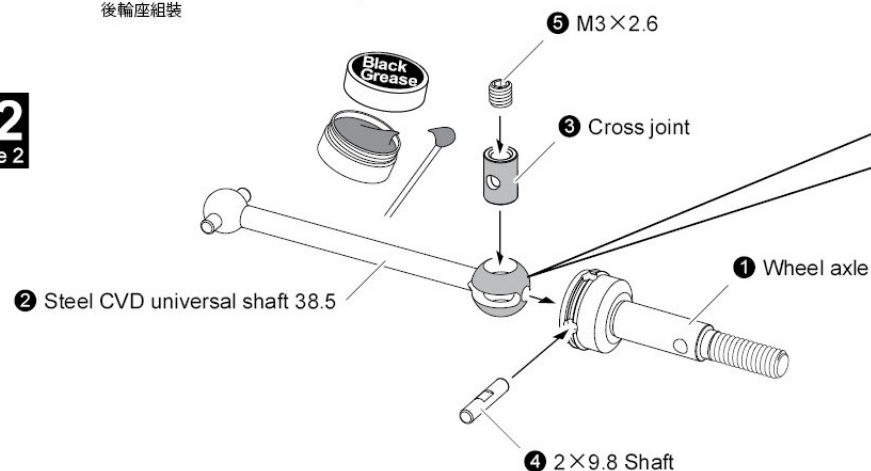



STEP 2

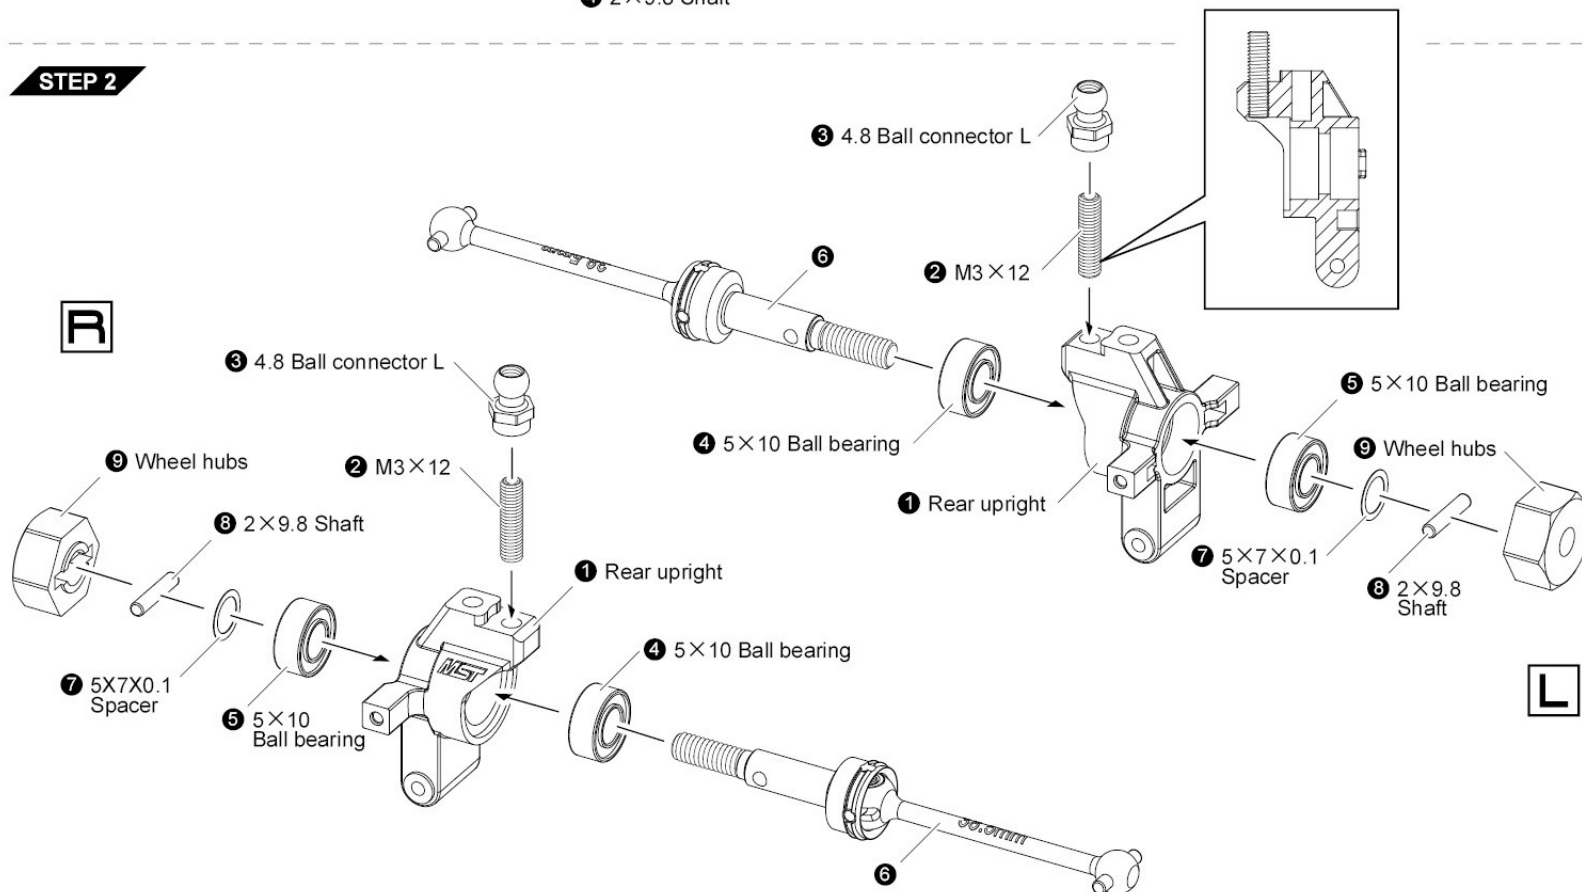


STEP 2 Wheel hubs assembly
(Brake disc shaped)

煞車碟盤型輪座組裝

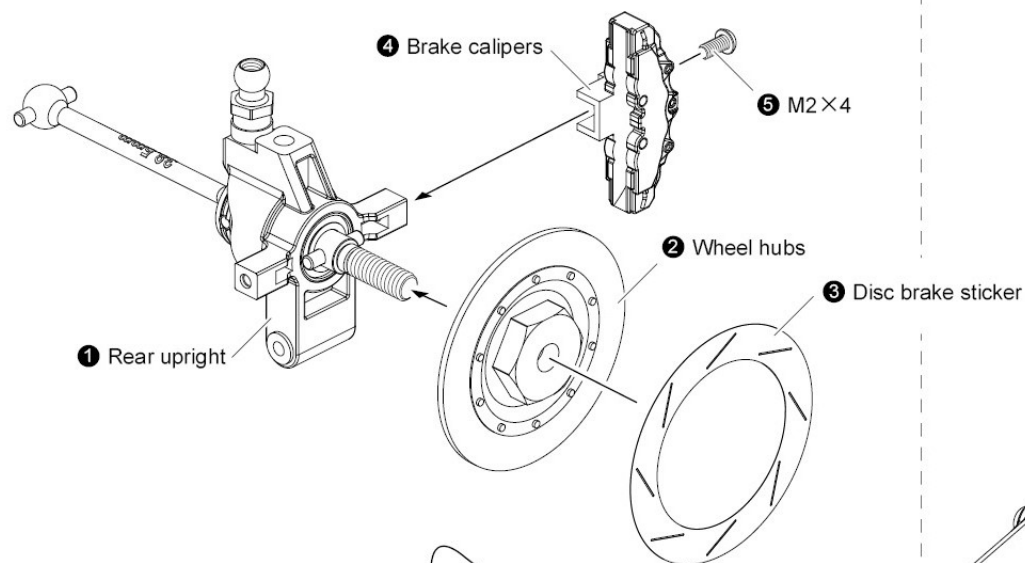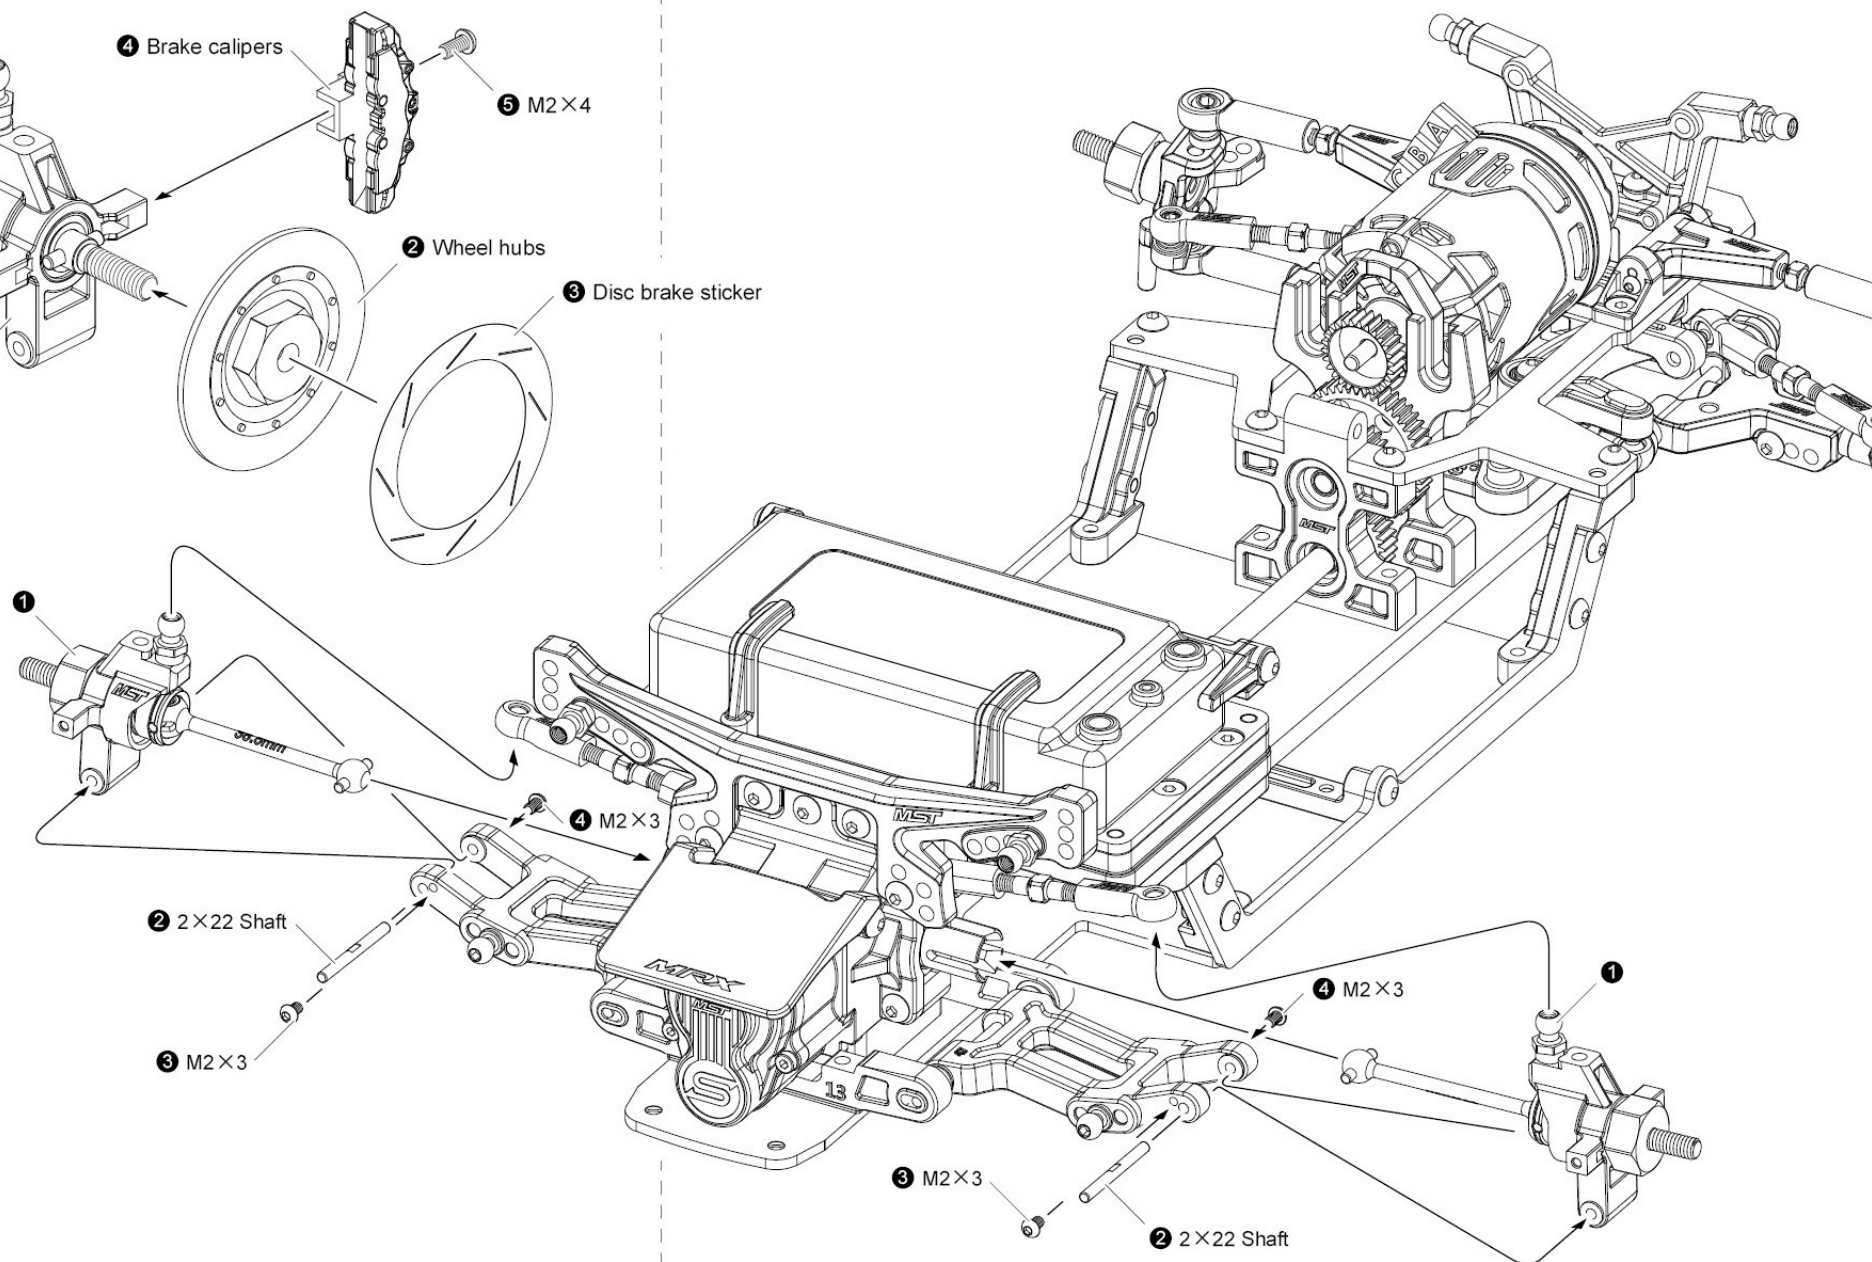
**STEP 3** Attaching rear axle
安裝後輪座

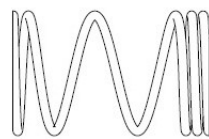


DK-RWD Drift spring (26mm) ×2 (red)
DK-RWD飄移車前避震彈簧(26mm)(紅)

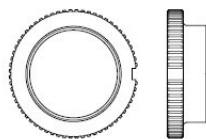


Spring retainer ×4
避震器調整環

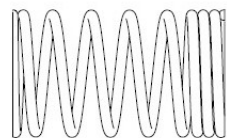

DK-RWD Drift spring (28mm) ×2 (purple-green)
DK-RWD飄移車後避震彈簧(28mm)(紫綠)



Cylinder cap ×4
避震器上蓋



Damper cylinder ×4
避震筒身




Piston rod ×4
避震軸心




Piston ×4
避震活塞



Rod guide cap ×4
避震器下蓋




Damper adjuster ×4
避震器拉桿




12×1 O-ring ×4
O環



Damper O-ring P3 ×4
避震器O環



E-clip ×10
E形扣



M3×4 screw ×4
沉頭螺絲





Oil seal ×4
避震器氣室




Rod guide ×4
避震器下蓋墊片


STEP 1 Damper assembly 避震器組裝

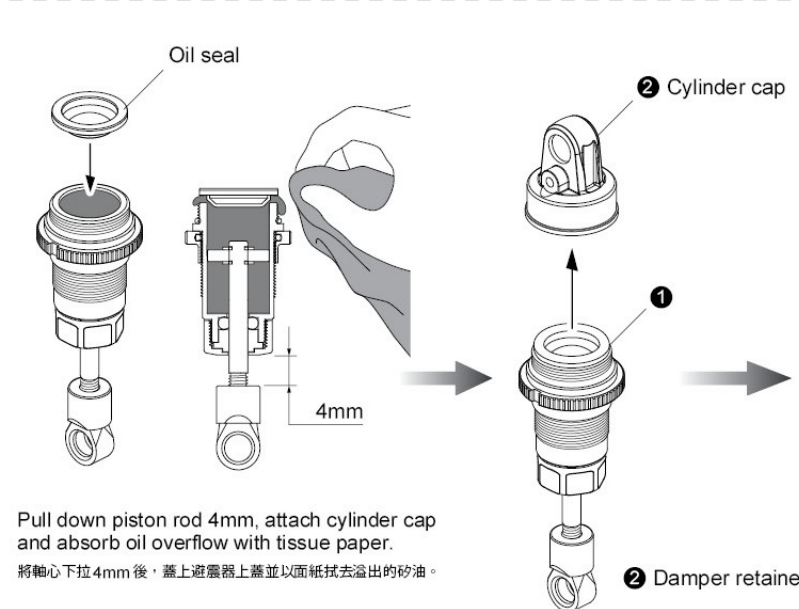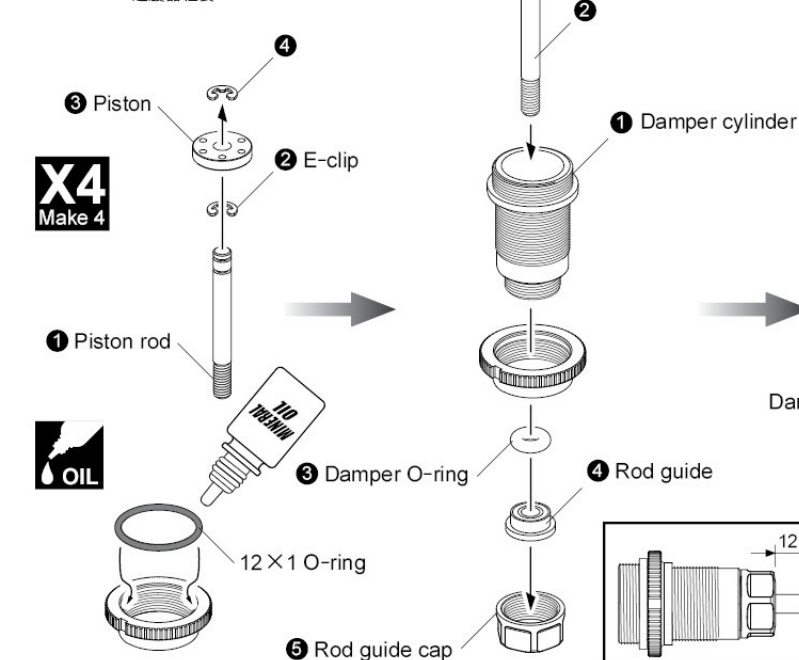

Pull down piston rod 4mm, attach cylinder cap and absorb oil overflow with tissue paper.
將軸心下拉4mm後，蓋上避震器上蓋並以面紙拭去溢出的砂油。

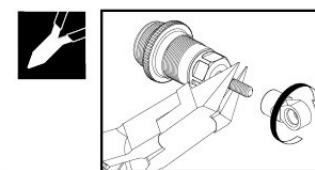


Damper adjuster

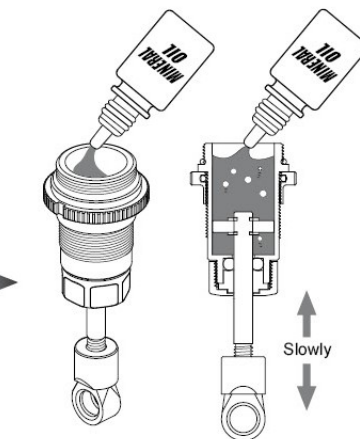



Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入避震油，緩慢上下移動活塞將氣泡移除。

X4
Make 4

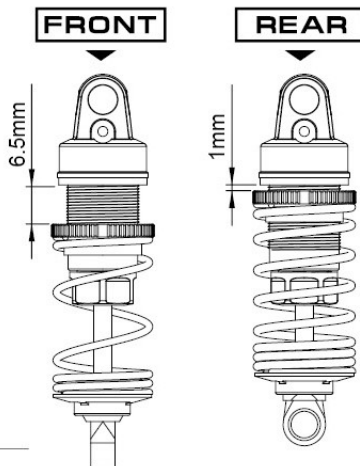


※ The height of the shock absorber adjusting ring is for reference only! Please make F8mm R5mm as the actual vehicle height after installing the electric components completely.
避震器調整環預壓僅供參考！
請安裝完整電裝後以實際車高F8mm R5mm為準。

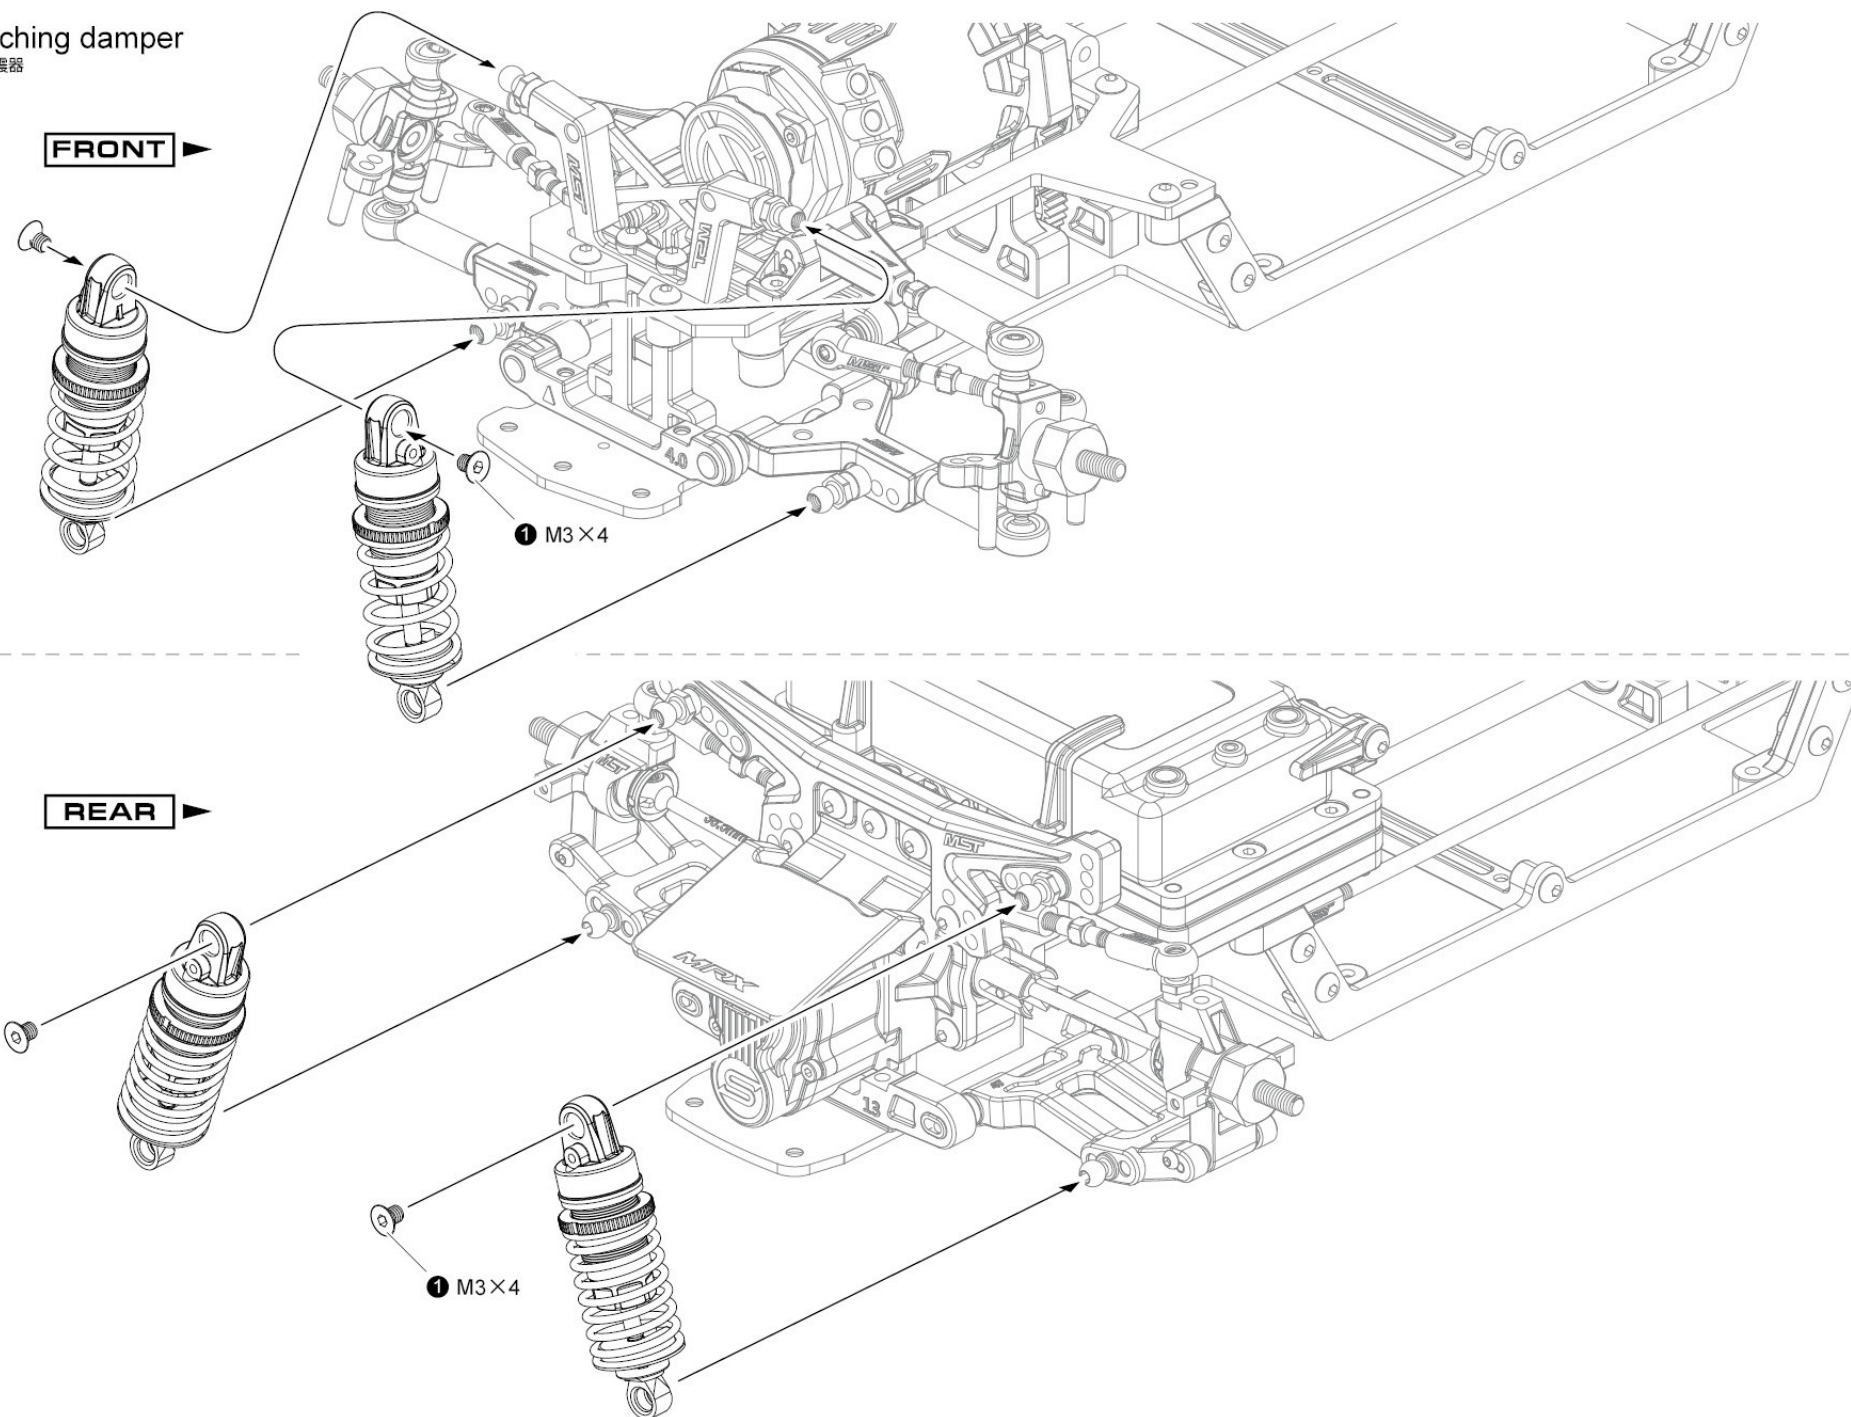STEP 2 Attaching damper
安裝避震器

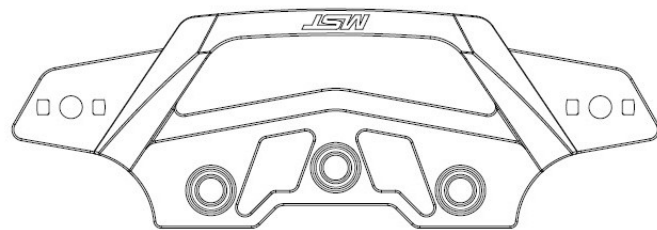

Bumper support ×1
防撞板上蓋

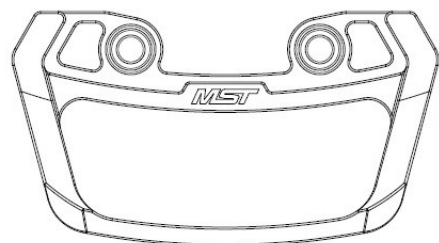


Rear bumper ×1
防撞板下座



Rear body mount ×2
後車殼支柱




Front body mount ×2
前車殼支柱

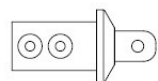

Body mount cover M ×2
支柱套 M



Body mount cover L ×2
支柱套 L



M3×12 screw ×2
圓頭螺絲



M3×8 screw ×5
沉頭螺絲




M3×10 screw ×2
沉頭螺絲




M2×8 screw ×4
圓頭螺絲

STEP 1 Attaching body mounts

安裝車殼固定座

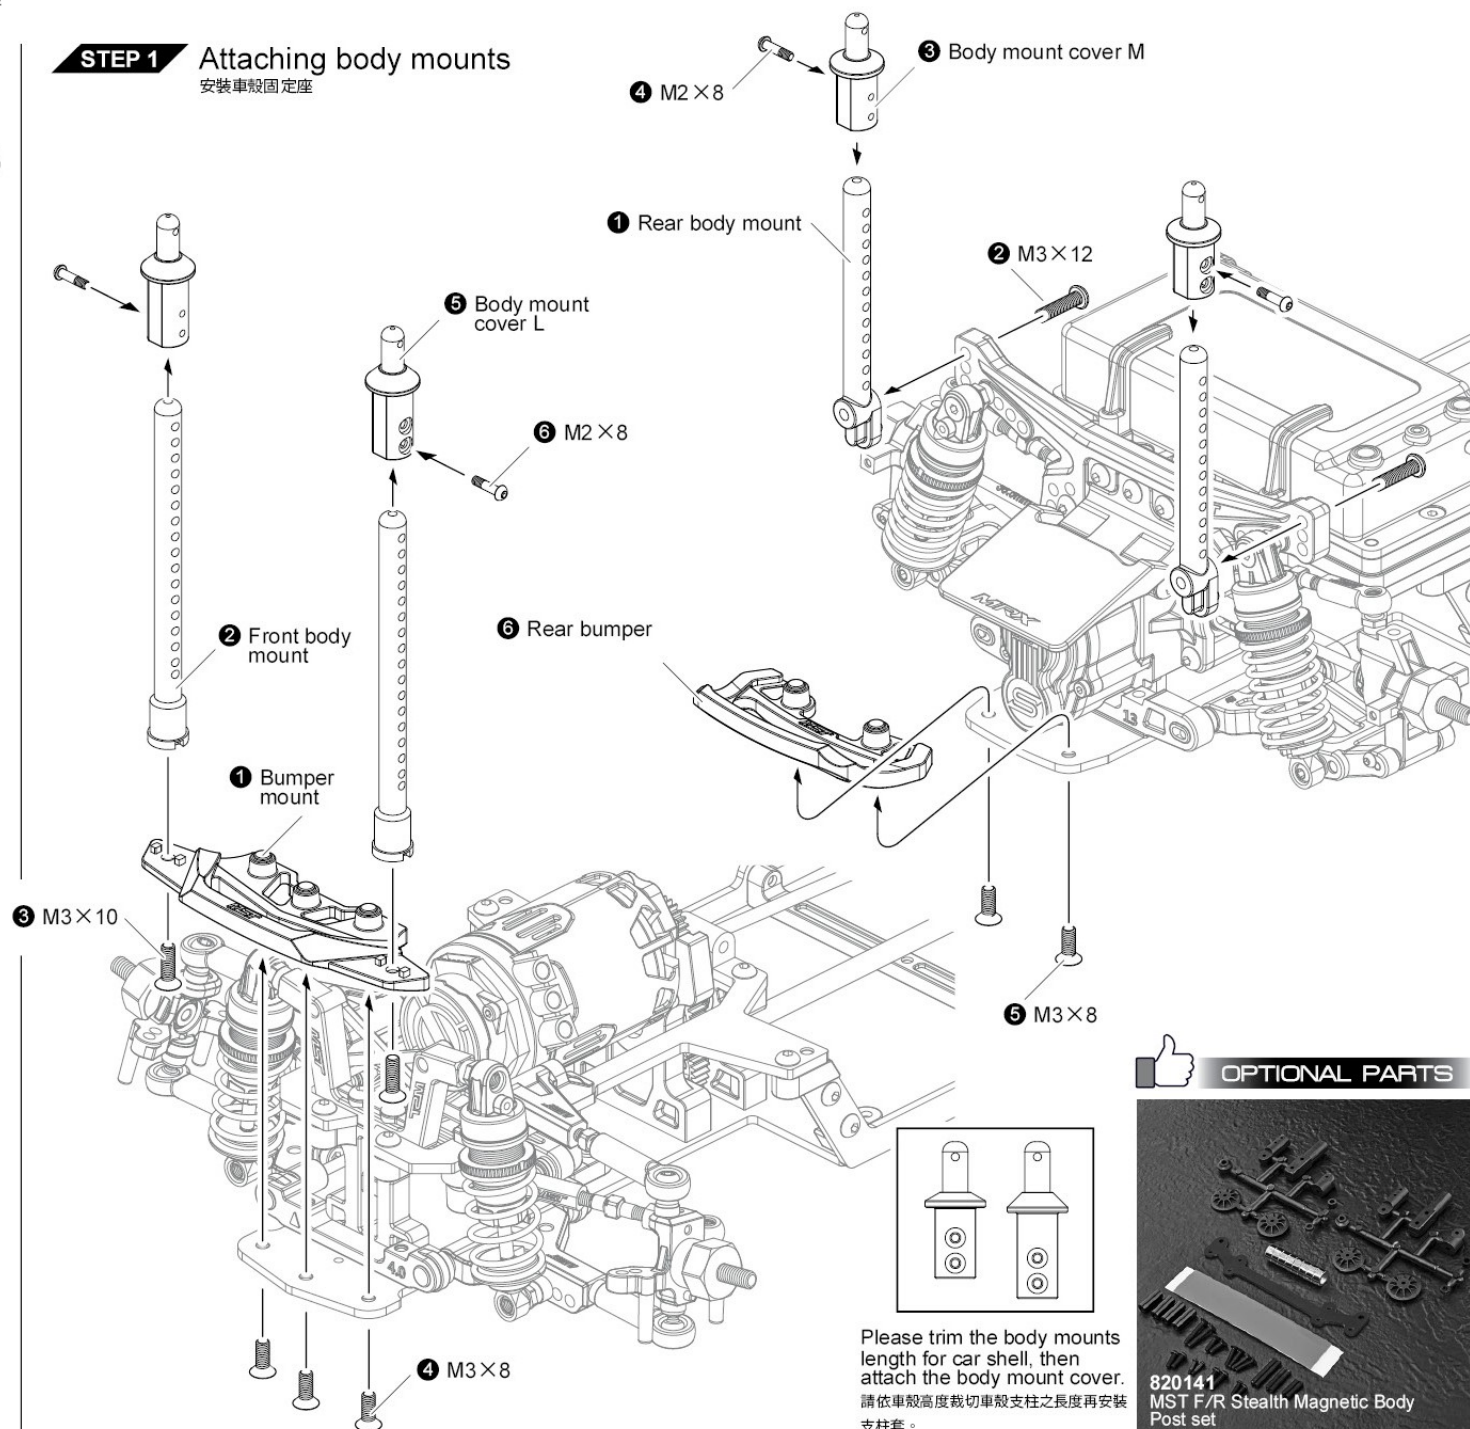

OPTIONAL PARTS

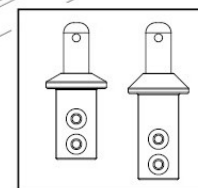

Please trim the body mounts length for car shell, then attach the body mount cover.
請依車殼高度裁切車殼支柱之長度再安裝支柱套。



PARTS **WHEELS** 輪胎



Flange nut M4 ×4
凸緣螺帽M4

Bag 8




Wheel hub spacer 1.0 ×2
輪座墊片 1.0

Bag 8




※ NOT including.
Please refer to MST website for the
wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]


STEP 1 Attaching wheels / ESC / Gyro 安裝輪胎 / ESC / 陀螺儀

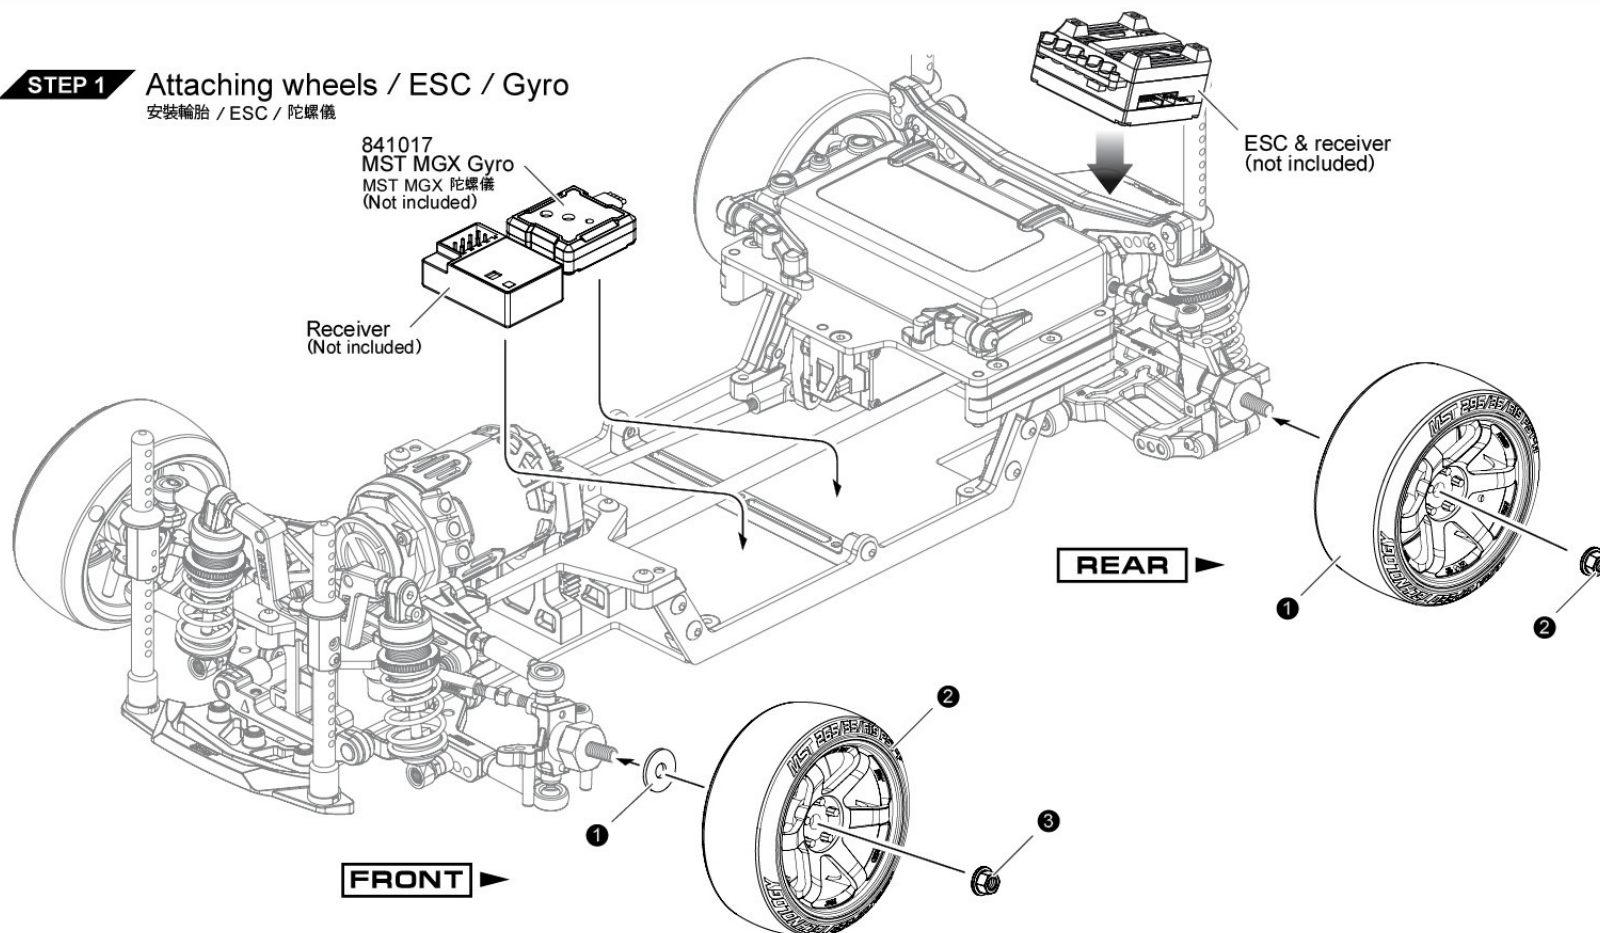



Battery Installation and Removal Tips 電池拆裝要點

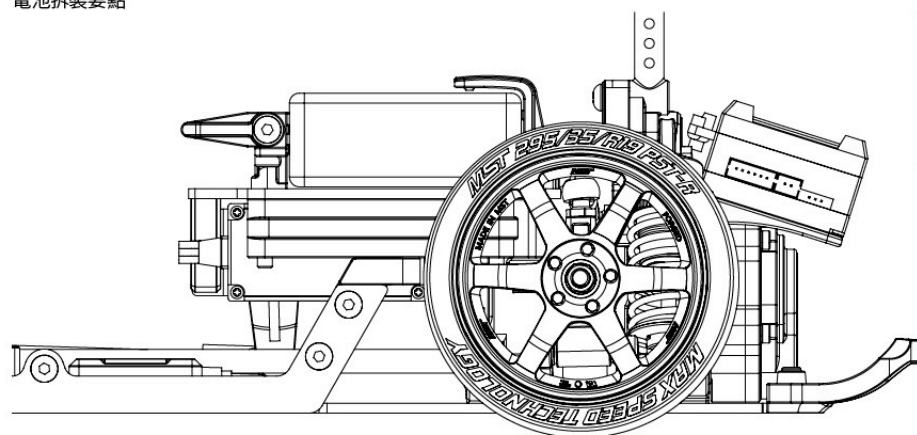

※ Raise the rear of the car to
allow the tires to naturally
down install/ remove the
battery.
抬高後車身，讓輪胎自然放下，
即可安裝或拆卸電池

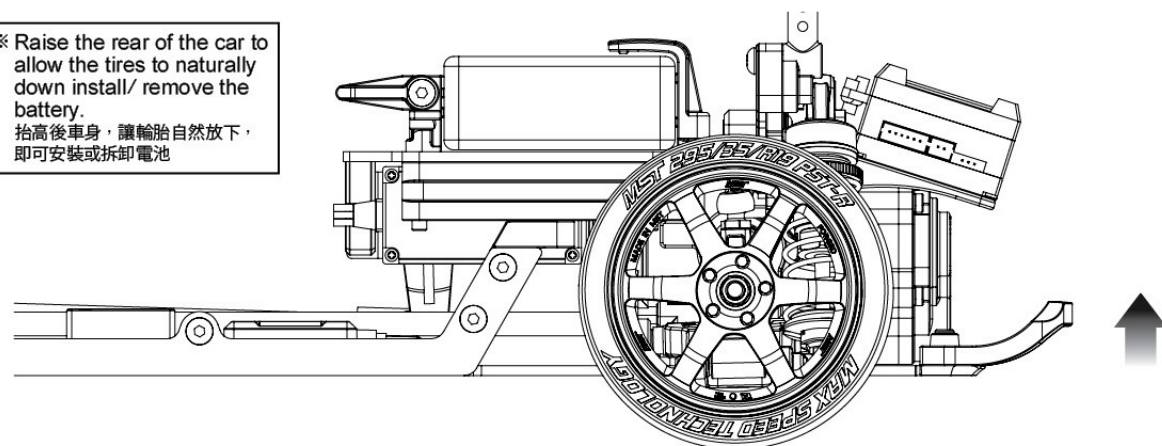


STEP 1 Caster angle setting
後傾角設定

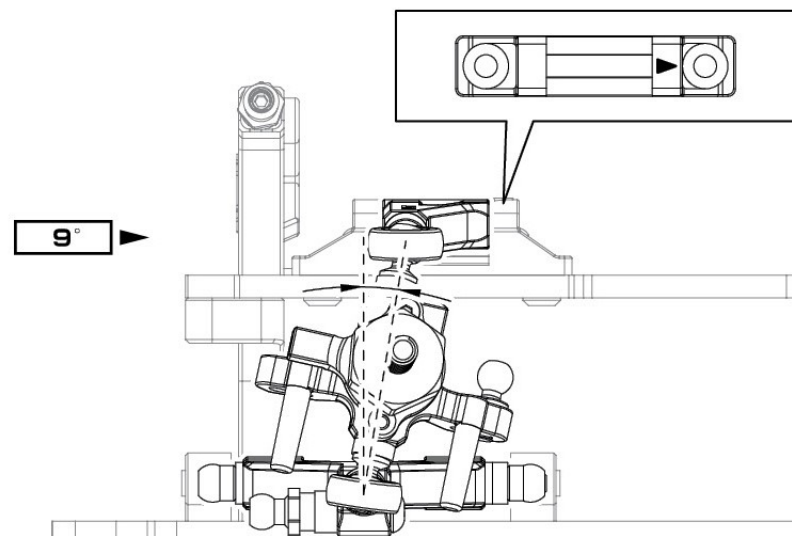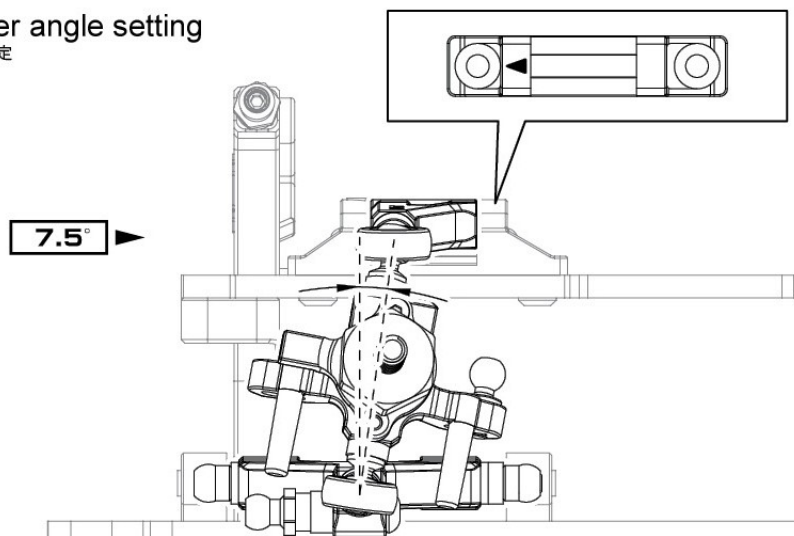

STEP 2 Ackermann angle setting
阿克曼角設定

This spacer is used for adjusting the Ackermann angle.

此空間用於調整阿克曼角

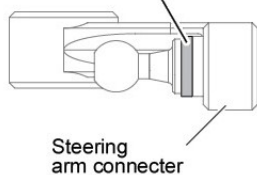

※ Increasing the spacer thickness results in a smaller Ackermann angle.

增加墊片厚度會導致更小的阿克曼角


※ Decreasing the spacer thickness results in a larger Ackermann angle.

減小墊片厚度會導致更大的阿克曼角

※ The factory setting uses a 1mm thick spacer.


原廠設置使用1mm厚的墊片

STEP 3 ESC A / B / C winding diagram
ESC A / B / C 繞線示意圖

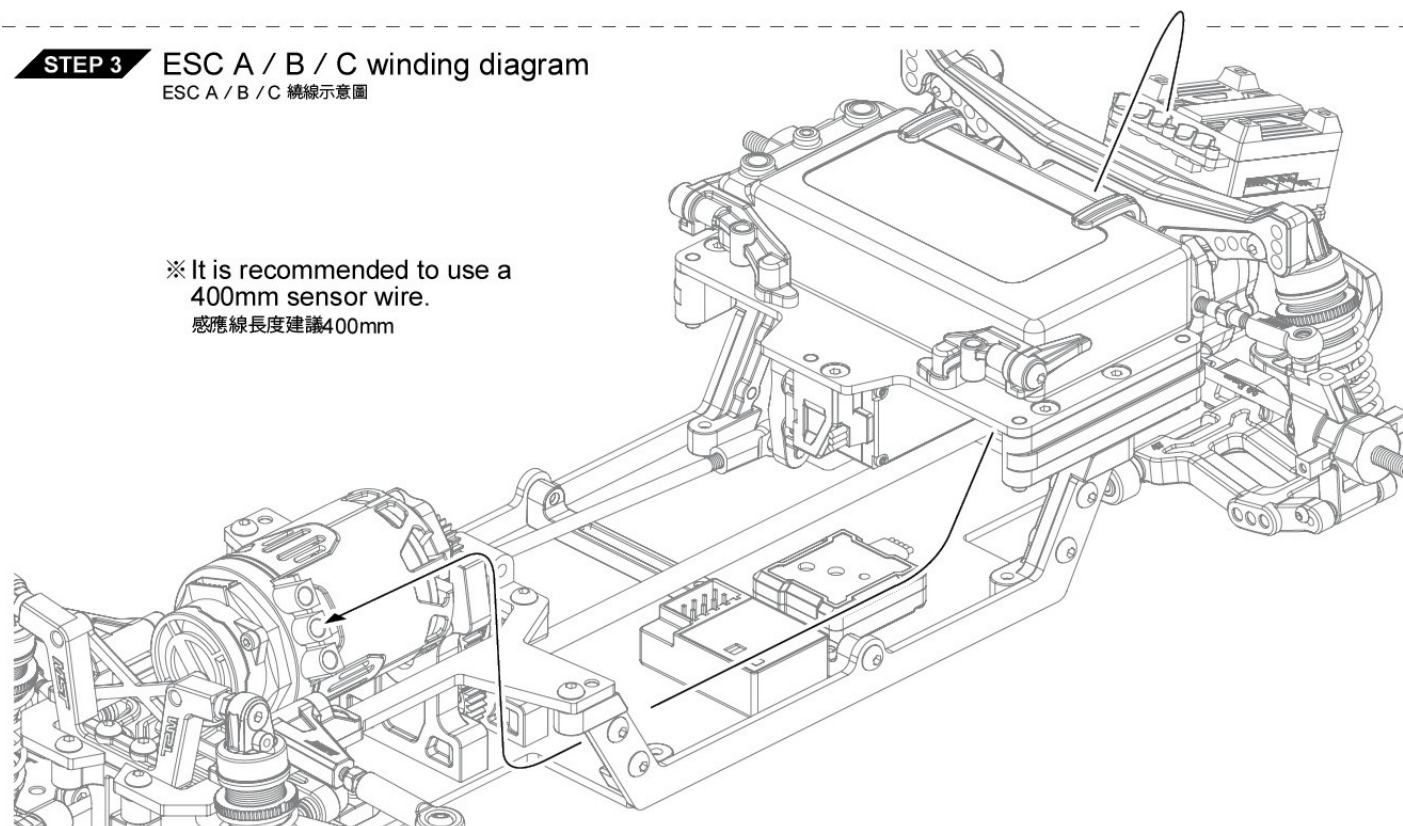


※ It is recommended to use a 400mm sensor wire.
感應線長度建議400mm

Steering

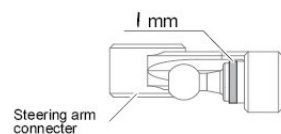

Caster

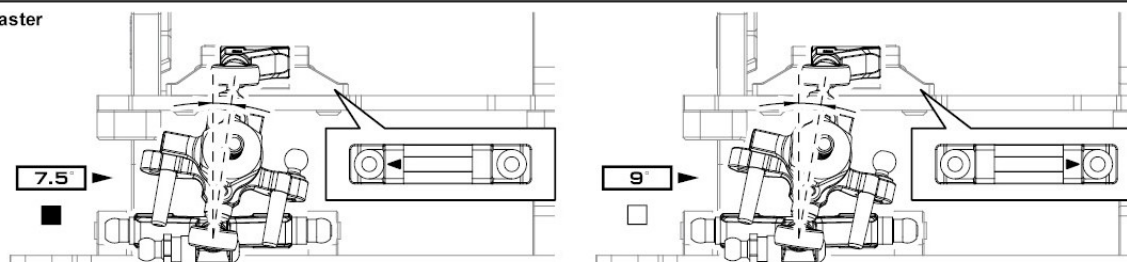


FRONT

Tire: Silver

Wheel: TE37

Offset: +5

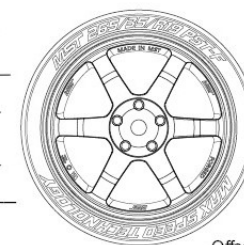


REAR

Tire: Silver

Wheel: TE37

Offset: +5

Front upright

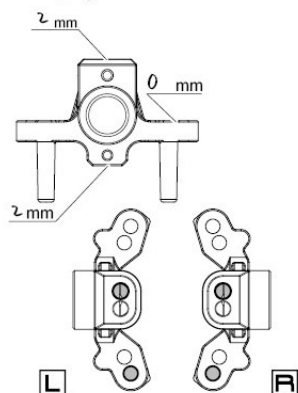


Front suspension

Camber: 8.5°

Toe-out: 3

Ride height: 8 mm

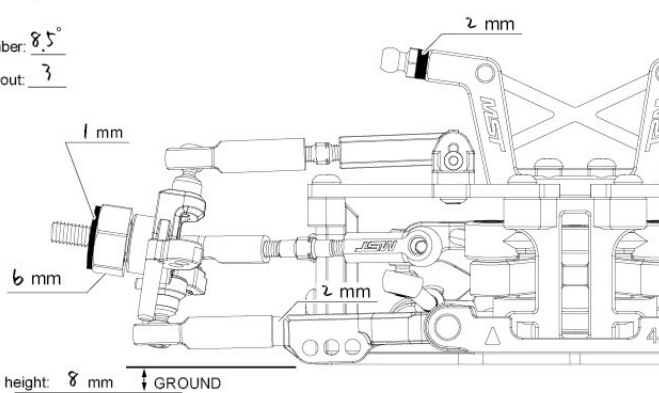


Rear suspension


Camber: 1

Toe-in: 0.5


Ride height: 5 mm

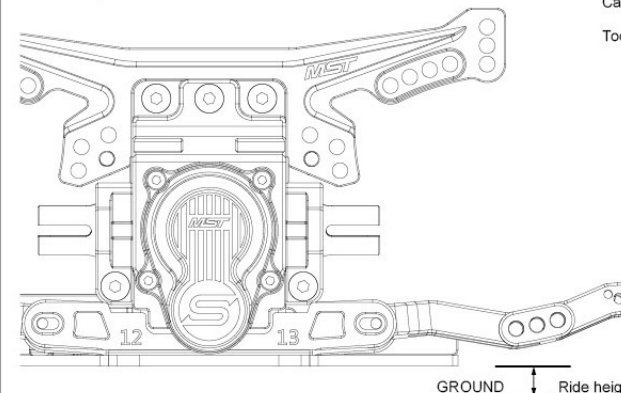


Rear upright

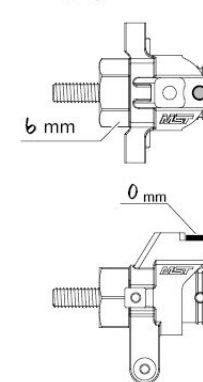

Front Suspension mount Rollcenter

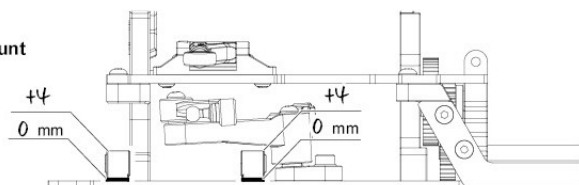

Rear diff

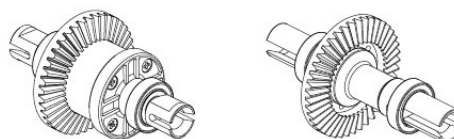


☒ Gear diff.


☐ Ball diff.

Diff oil # 3000

Rear Suspension mount Rollcenter

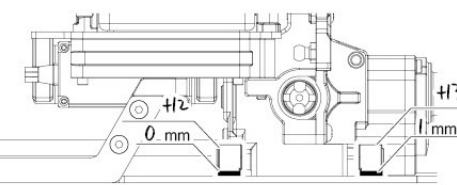

Front damper

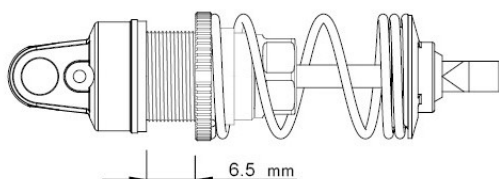

Shock oil: #10

Spring: 26 mm ϕ 1.2

Spring color: Red

Piston: ϕ 1.2 mm

Piston hole: 3

※ FORMULA

終傳比計算式


Spur Gear 48T ÷ Pinion Gear × Gear A ÷ Gear B × Tail Gear A ÷ Tail Gear B × Big Bevel Gear ÷ Small Bevel Gear = Transmission ratio
大直齒 48T ÷ 馬達齒 × 齒輪 A ÷ 齒輪 B × 尾齒 A ÷ 尾齒 B × 大傘齒 ÷ 小傘齒 = 終傳

$48T \div (22T) \times 30T \div 28T \times (38T) \div (19T) \times (42T) \div (11T) = (14.38)$

Motor & ESC: _____ Battery: _____

Transceiver: _____ Gyro: _____

Rear damper

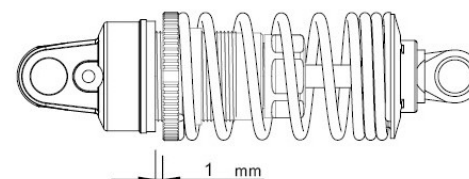

Shock oil: #10

Spring: 28 mm ϕ 1.4





Spring color: Purple-Green

Piston: ϕ 1.2 mm

Piston hole: 3


PARTS

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK



	M3×2.6 screw ×2 止付螺絲 110060		M2×8 Taping screw ×8 自攻沉頭螺絲 110058		1.5×7.8 Shaft ×5 插銷 110059		2.5×9×0.1 Spacer ×4 墊片 310040		5×7×0.1 Spacer ×2 墊片 820018
	M3×12 screw ×4 止付螺絲 110056		M2×6 Screw ×2 沉頭螺絲 110042		1.6×9 Shaft ×1 插銷 110071		3×6×0.5 Spacer ×4 墊片 110047		5×7×0.3 Spacer ×4 墊片 820020
	M2×3 screw ×8 圓頭螺絲 110082		M3×4 Screw ×4 沉頭螺絲 110099		2×9.8 Shaft ×4 插銷 110017		3×8×0.5 Spacer ×1 墊片 110048		10×12×0.3 Spacer ×2 墊片 820024
	M2×4 screw ×4 圓頭螺絲 110004		M3×6 screw ×11 沉頭螺絲 110024		2×9.8 Shaft ×2 插銷 110046		4×6×0.3 Spacer ×3 墊片 820017		4×14×0.1 Spacer ×2 墊片 310039
	M2×8 screw ×4 圓頭螺絲(半牙) 110045		M3×8 screw ×36 沉頭螺絲 110005		2×22 Shaft ×4 插銷 310047		Wheel nut M4×5.5 ×4 突緣螺帽 820074		
	M3×5 screw ×2 圓頭螺絲 110049		M3×10 screw ×2 沉頭螺絲 110052		2.5×46 Arm shaft ×4 擺臂插銷 310048		Bearing 4X8X3 (4) ×2 軸承 4X8X3 (4) 120026		3×7×3 Ball bearing ×4 培林 120006
	M3×6 screw ×2 圓頭螺絲 110001		M3×18 Screw ×2 沉頭螺絲 110078		Steel CVD universal shaft 38.5 (40°) ×2 鋼製CVD傳動軸 38.5 (40°) ×2 210267		E-Clip 3.0 ×6 E扣 3.0 110070		4×8×3 Ball bearing ×3 培林 120013
	M3×8 screw ×25 圓頭螺絲 110002		M3×20 Screw ×2 沉頭螺絲 110101		Cross joint ×2 連接軸 820030		R-clip 5.0 ×6 R-銷 5.0 820075		5×8×2.5 Ball bearing ×8 培林 120003
	M3×10 screw ×11 圓頭螺絲 110026		4.8 Ball connector ×4 外六角球頭 210161				Bevel gear diff O-ring ×1 傘差O環 130024		4×10×4 Ball bearing ×2 培林 120018
	M3×12 screw ×2 圓頭螺絲 110029		4.8 Ball connector L ×6 外六角球頭(長) 210344		M3×20 Steel reinforced turnbuckle ×2 鋼製可調拉桿 810028		Bevel gear shaft ×1 傘齒軸 310125		5×10×4 Ball bearing ×7 培林 120002
	M3×14 screw ×2 圓頭螺絲 110061		4.8×4.5 Ball connector ×6 球頭螺絲 310001		M3×28 Steel reinforced turnbuckle ×4 鋼製可調拉桿 810030				8×14×4 Ball bearing ×1 培林 120007
	M3×16 screw ×2 圓頭螺絲 110086		5.8×6 Ball connector ×4 球頭螺絲 210625		Wheel axle ×2 萬向接杆 310065		Reinforced bevel diff. assembly ×1 強化傘齒總成組 210685		10×15×4 Ball bearing ×2 培林 120001
	M2×8 Screw ×4 有頭螺絲 110027		4.8×6 Ball connector L ×2 球頭螺絲(長) 310129		Main shaft ×1 主齒軸 310124				
	M3×40 Screw ×2 有頭螺絲(半牙) 110091		2WD Axle ×2 二驅軸 820095						

PARTS

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

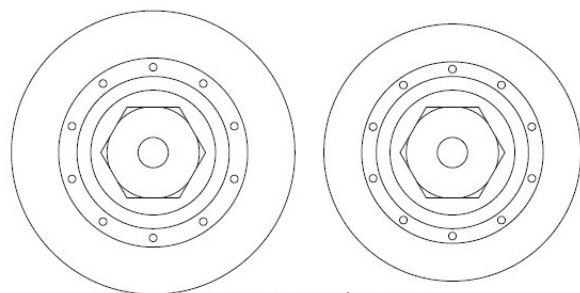





Wheel hubs w/disc shape
(large) with sticker
碟型六角輪座組 (加大型) 附貼紙
230041

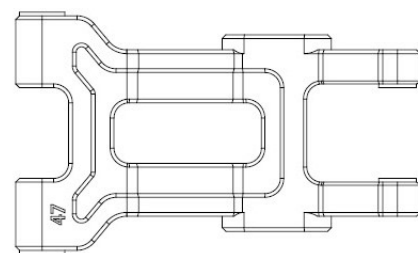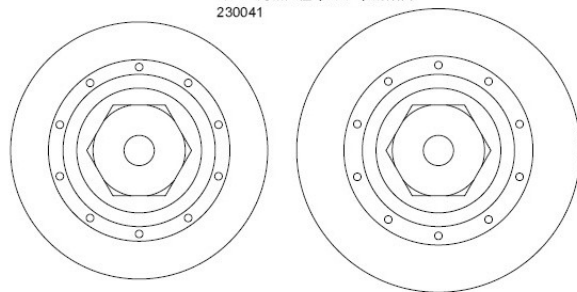


THA Rear arm set ×2
THA後擺臂組
230148




×4

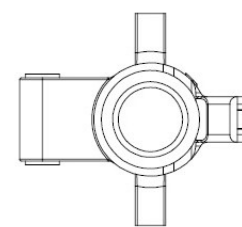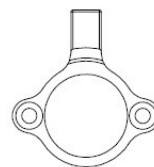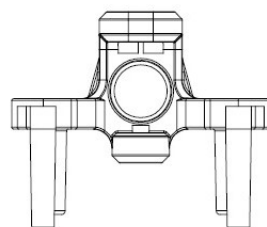


ATK V2 Front wheel hubs & THA rear hubs ×2
ATK V2 前輪座組 & THA 後輪座
230153

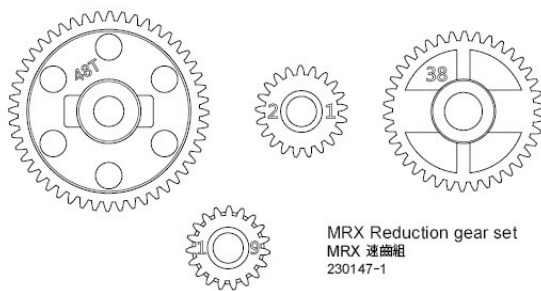


MRX Reduction gear set
MRX 速齒組
230147-1

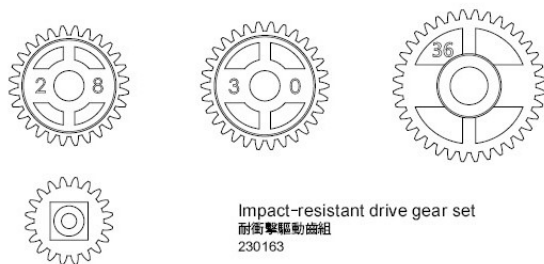

Impact-resistant drive gear set
耐衝擊驅動齒組
230163

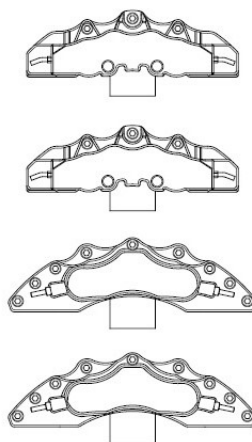

Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR

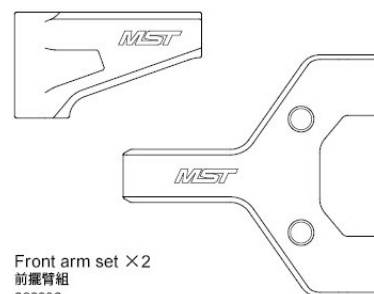


Front arm set ×2
前擺臂組
230062




×1

×1


×2

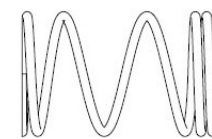

DK-RWD Drift spring (26mm) ×2
(red)
DK-RWD 飄移車前避震彈簧 (26mm) (紅)
820157

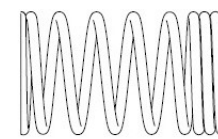


DK-RWD Drift spring (28mm) ×2
(purple-green)
DK-RWD 飄移車後避震彈簧 (28mm) (紫綠)
820157



Damper cylinder ×4
避震筒身
210071



Piston rod ×4
避震軸心
310008

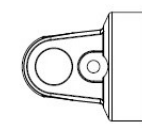

Cylinder cap ×4
避震器上蓋
210057



Piston ×4
避震活塞
210235




Damper adjuster ×4
避震器拉桿
820079




Rod guide cap ×4
避震器下蓋
210057



12×1 O-ring ×4
O環
130049

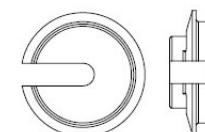

Damper retainer ×4
避震器彈簧座
820079

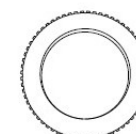

Spring retainer (red) ×4
避震器調整環 (紅)
310106R



Oil seal ×4
避震器氣室
130004



E-clip ×10
E形扣
110013




Rod guide ×4
避震器下蓋墊片
210235




Damper O-ring P3 ×4
避震器O環
130059

PARTS


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

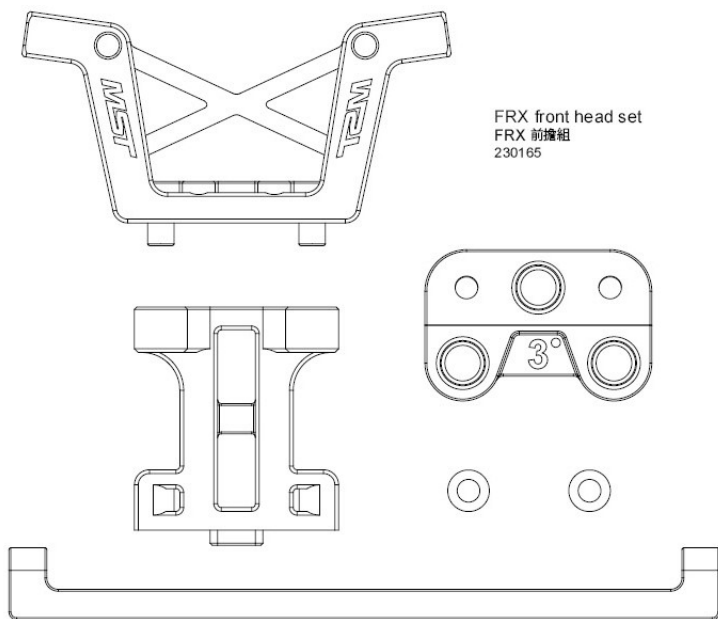


FRX front head set
FRX 前擋組
230165

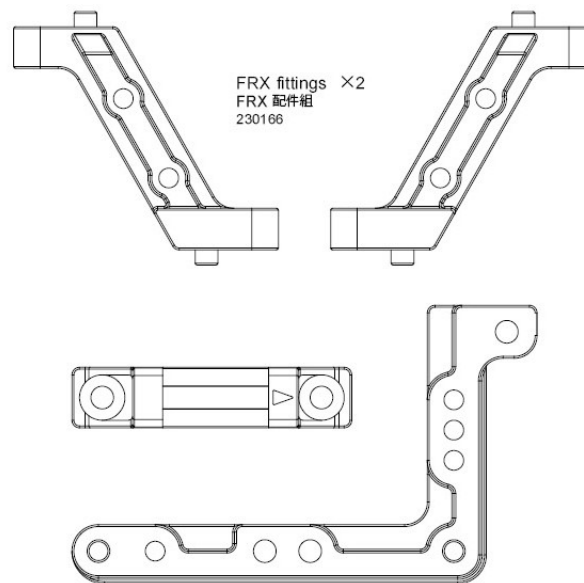


FRX fittings ×2
FRX 配件組
230166

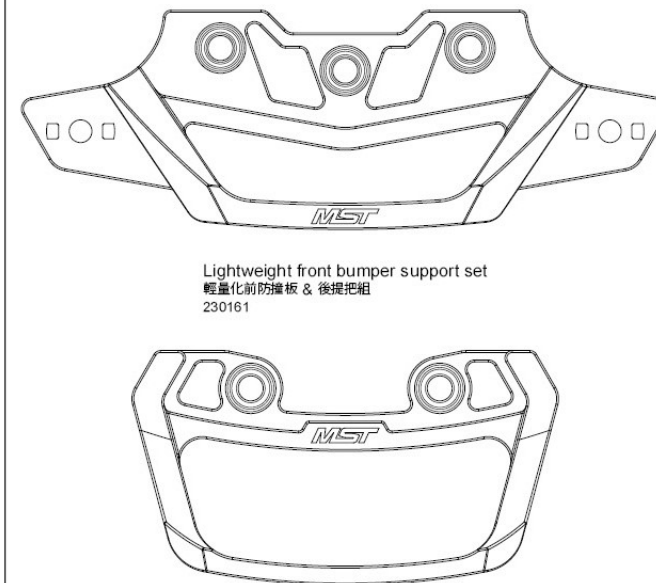

Lightweight front bumper support set
輕量化前防撞板 & 後提把組
230161

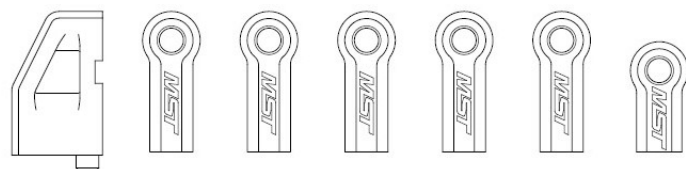


4.8 Rod ends set (M/S) ×2
4.8 拉桿頭組 (M/S)
230067

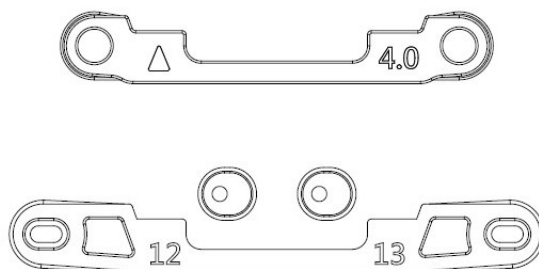

Suspension mount ×2
下擺臂座組
230173



FXX Alum. steering post
FXX 鋁合金轉向支柱
210345

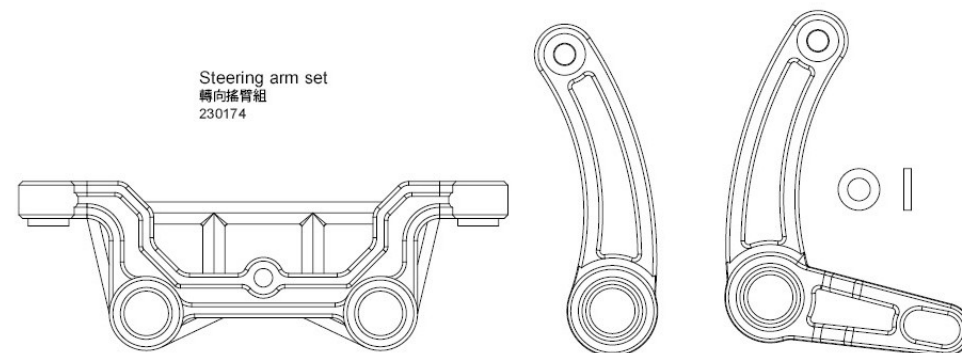


Steering arm set
轉向搖臂組
230174




3×145 Turnbuckle
3×145 拉桿
310130

PARTS


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

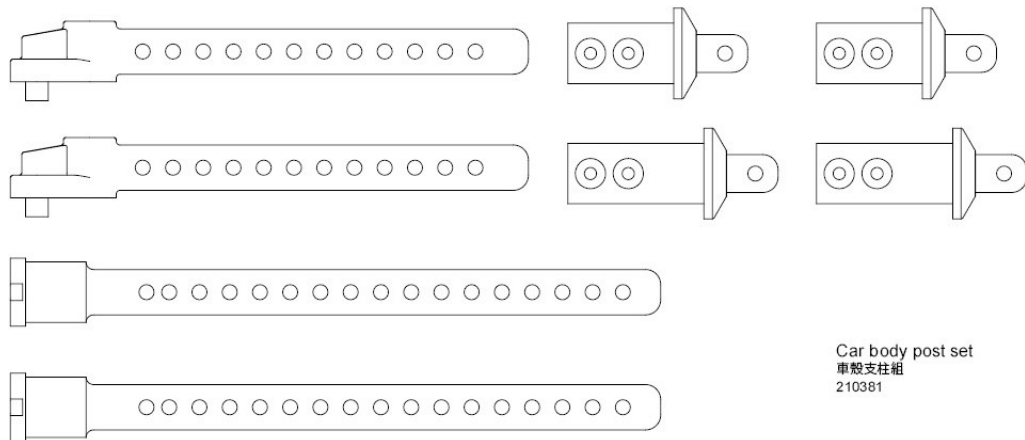

Car body post set
車殼支柱組
210381

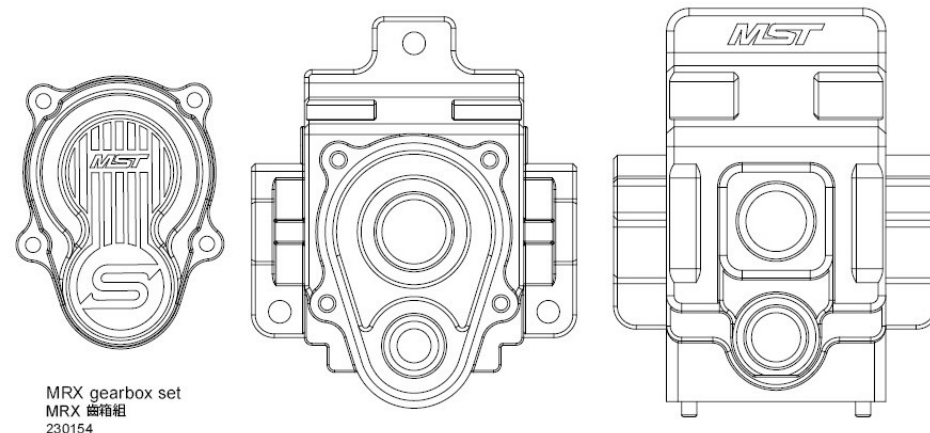


MRX gearbox set
MRX 齒箱組
230154

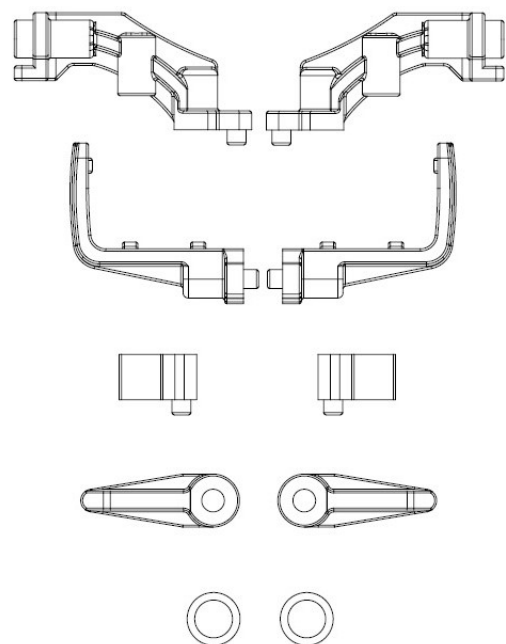


Quick-release battery mount
快拆式電池座組
230145



PVC Deck
protective film ×2
PVC 底盤防刮貼
820152

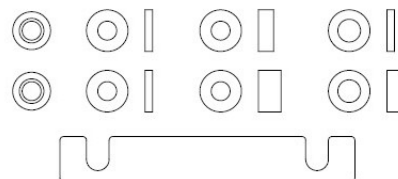



Suspension ball & spacer set ×4
插銷球頭 & 墊片組
230159

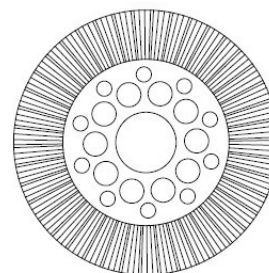

Impact-resistant bevel
gear set 42-11
耐衝擊傘齒組 42-11
230168




MRX motor mount
MRX 馬達座組
230157

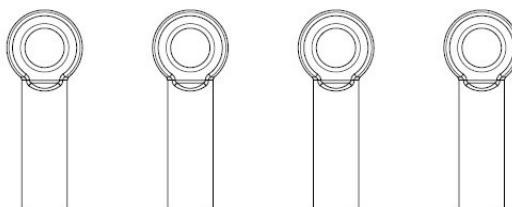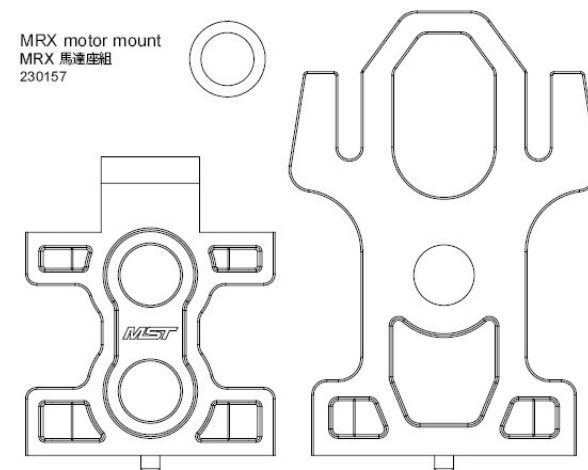









5.8×26 Reinforced adjuster set
強化拉桿頭組
210031

Servo horn set (long) (23T/25T)
伺服機舵片組-長 (23T/25T)
210033


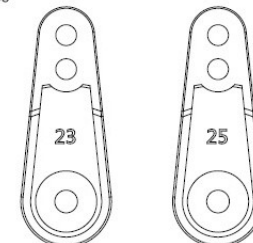


PARTS

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

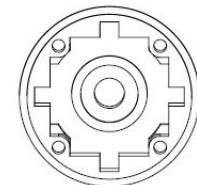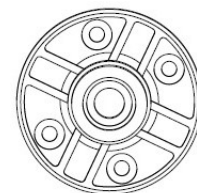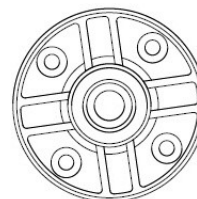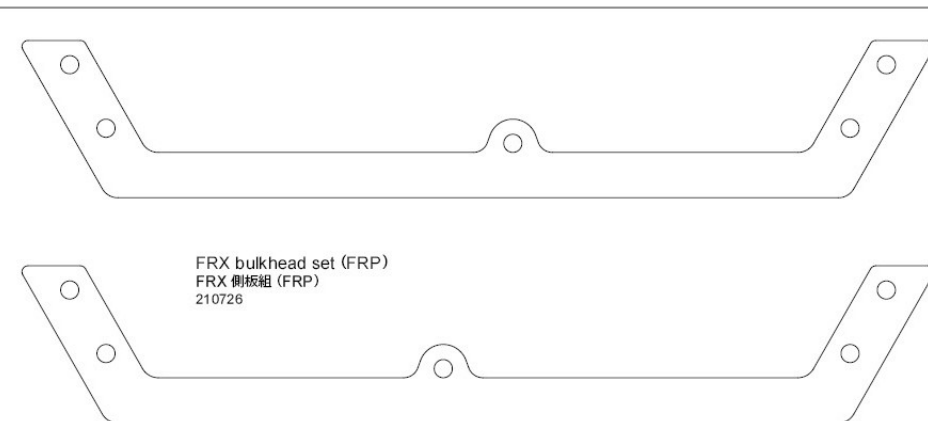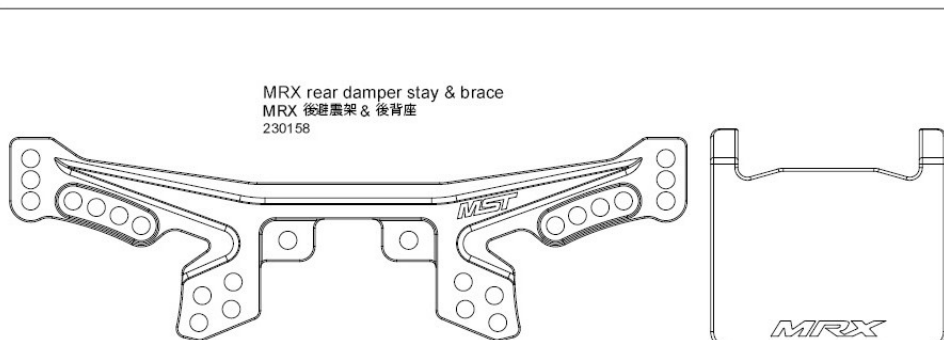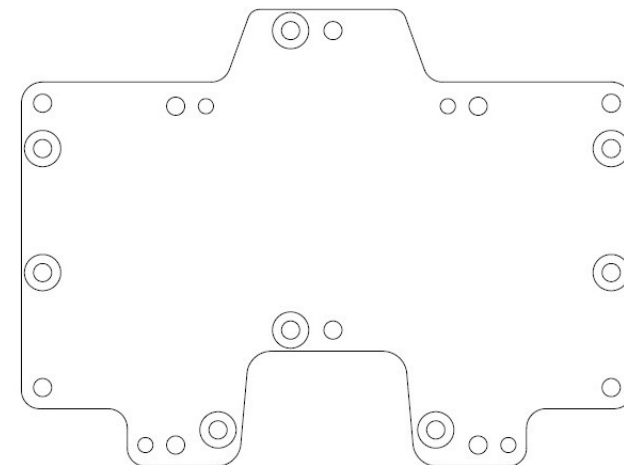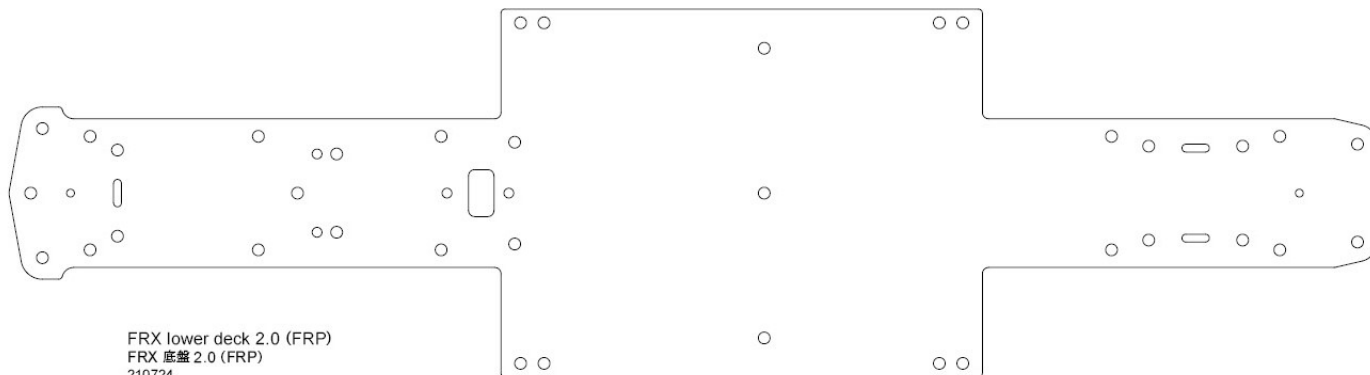

Bevel gear box V2
傘齒箱組 V2
230169

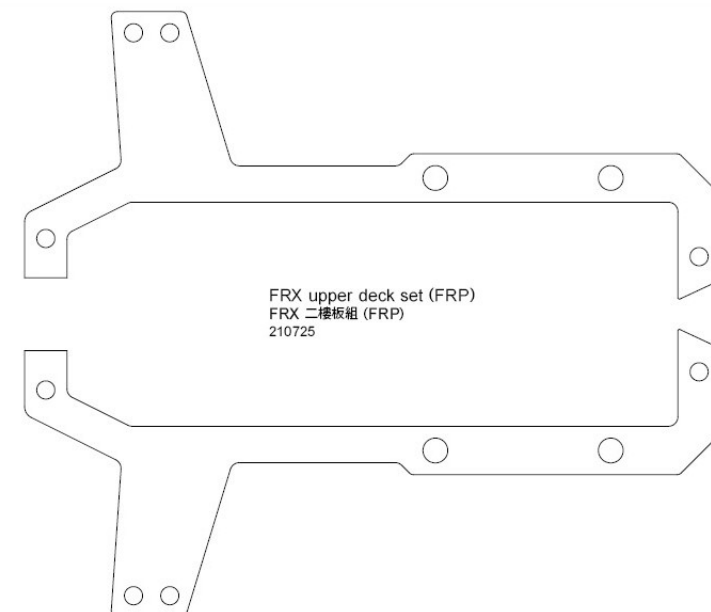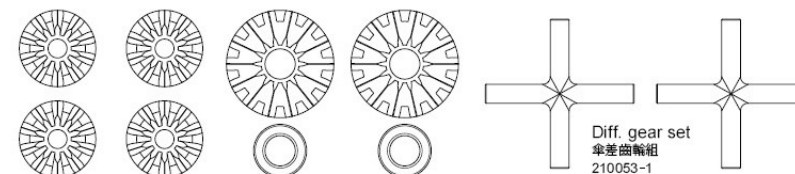

PARTS CODE

110001	Round head screw M3×6 (10)	110099	Countersunk screw M3×4 (10)	210685	Bevel gear diff. joint set	310039	Spacer 4×14×0.1 (8)
110002	Round head screw M3×8 (10)	110101	Countersunk screw M3×20 (6)	210689	Steel final drive gear 19T	310040	Spacer 2.5×9×0.1 (8)
110004	Round head screw M2×4 (6)	120001	Ball bearing 10×15 (4)	210708R	FRX alum. center driveshaft (red)	310047	Arm shaft 2.0×22 (2)
110005	Countersunk screw M3×8 (10)	120002	Ball bearing 5×10 (4)	210724	FRX S lower deck (FRP 2.0)	310048	Arm shaft 2.5×46 (4)
110013	E-clip 2.0 (10)	120003	Ball bearing 5×8 (4)	210725	FRX S front upper deck (FRP 2.5)	310065	Wheel axle (2)
110017	Shaft 2×9.8 (10)	120006	Ball bearing 3×7 (2)	210726	FRX S bulkhead (FRP 2.0)	310106R	Spring retainer (Red) (2)
110019	Shaft 2×11.8 (5)	120007	Ball bearing 8×14 (2)	210727	FRX S battery & servo mounting plate (FRP 2.0)	310124	MRX Speed-change gear shaft
110024	Countersunk screw M3×6 (10)	120013	Ball bearing 4×8×3 (2)	230041	Wheel hubs w/disc shape (large)	310125	MRX Alum. Quick-release gear shaft
110026	Round head screw M3×10 (10)	120018	Ball bearing 4×10×4 (2)	230062	Front arm set	310129	Ball connector 4.8×6 L (4)
110027	Cap screw M2×8 (6)	120026	Bearing 4×8×3 (4)	230067	4.8 Rod ends set (M/S)	310130	Threaded shaft 3×145
110029	Round head screw M3×12 (6)	130004	Oil seal (4)	230145	Quick-release battery mount	810028	Steel reinforced turnbuckle 3×20 (2)
110042	Countersunk screw M2×6 (6)	130024	Bevel gear diff O-ring (5)	230147~1	Impact-resistant MRX Reduction gear set	810030	Steel reinforced turnbuckle 3×28 (2)
110045	Round head screw M2×8 (partial thread) (6)	130025	O-ring P4 (red) (8)	230153	ATK V2 Front wheel hubs & THA rear hubs	820017	Spacer 4×6×0.3 (8)
110046	Shaft 2×9.8 (8)	130049	O-ring 12×1 (4)	230169	Bevel gear box V2	820018	Spacer 5×7×0.1 (8)
110047	Spacer 3×6×0.5 (8)	130059	High-smooth damper O-ring P3 (white) (10)	230154	MRX gearbox set	820020	Spacer 5×7×0.3 (8)
110049	Round head screw M3×5 (10)	210031	Reinforced adjuster set 5.8×26	230157	MRX motor mount	820024	Spacer 10×12×0.3 (8)
110052	Countersunk screw M3×10 (10)	210033	Servo horn set (long) (23T/25T)	230158	MRX rear damper stay & brace	820030	Cross joint (2)
110056	Set screw M3×12 (6)	210053~1	Impact-resistant diff. gear set	230159	Suspension ball & spacer set	820074	Wheel nut m4 (4)
110058	Tapping countersunk screw 2×8 (8)	210057	Damper cap set	230161	Lightweight front bumper support set	820075	R-clip 5.0 (10)
110059	Shaft 1.5×7.8 (8)	210071	Damper cylinder (2)	230163	Impact-resistant drive gear set	820095	AKM 2WD axle (2)
110060	Set screw M3×2.6 (10)	210161	Ball connector nut 4.8 (4)	230165	FRX front head set	820152	PVC Deck protective film
110061	Round head screw M3×14 (6)	210235	Piston spacer set	230166	FRX fittings	820157	DK-RWD Drift spring set (F26/R28)(6&6)
110070	E-clip 3.0 (10)	210267	Steel CVD universal shaft 38.5 (40°) (2)	230168	Impact-resistant bevel gear set 42~11	820157	DK-RWD Drift spring set (F26/R28)(6&6)
110071	Shaft 1.6×9 (10)	210344	Ball connector nut L 4.8 (4)	230171	Arm set B		
110073	Countersunk screw M3×16 (6)	210345	FXX Alum. steering post	230173	Lower arm set B		
110078	Countersunk screw M3×18 (6)	210381	Car body post set	230174	Steering arm set		
110082	Round head screw M2×3 (6)	210510CR	Enlarged brake calipers (red) (4)	310001	Ball connector 4.8×4.5 (5)		
110086	Round head screw M3×16 (6)	210625	Ball connector L 5.8×6 (4)	310008	Piston rod (4)		
110091	Cap screw M3×40 (6)	210685	Bevel gear diff. joint set	310027	Screw tube (4)		

部品編號

110001	六角圓頭螺絲 M3×6	110099	六角沉頭 M3×4	210685	傘差接杯(長)	310039	4×14×0.1墊片
110002	六角圓頭螺絲 M3×8	110101	六角沉頭 M3×20	210689	鋼製終傳齒 19T (鑄刻)	310040	2.5×9×0.1 墊片
110004	六角圓頭螺絲 M2×4	120001	培林 10×15×4	210708R	FR 鋁合金中央傳動軸 (紅)	310047	插銷 2×22
110005	六角沉頭 M3×8	120002	培林 5×10×4	210724	FRX S 底盤 (FRP2.0)	310048	插銷 2.5×46
110013	E扣 2.0	120003	培林 5×8×2.5	210725	FRX 前二樓板 (FRP2.5)	310065	萬向接杯
110017	插銷 2×9.8	120006	培林 3×7×3	210726	FRX S 側板 (FRP2.0)	310106R	避震器調整環 (紅)
110019	插銷 2×11.8	120007	培林 8×14×4	210727	FRX S 電池 伺服機 固定板 (FRP2.0)	310124	MRX 鋼製蛋糕齒軸
110024	六角沉頭 M3×6	120013	培林 4×8×3	230041	碟盤組	310125	MRX 快拆傘齒軸(銀)
110026	六角圓頭螺絲 M3×10	120018	培林 4×10×4	230062	前擺臂組	310129	內六角公球頭 4.8×6 L
110027	六角有頭螺絲 M2×8	120026	軸承 4×8×3	230067	拉桿頭組	310130	拉桿 3×145
110029	六角圓頭螺絲 M3×12	130004	避震氣室	230145	快拆式電池座組	810028	鋼製強化可調拉桿 3×20
110042	六角沉頭螺絲 M2×6	130024	O環 22×0.6	230147~1	驅動齒&終傳齒組(30%)	810030	鋼製強化可調拉桿 3×28
110045	六角圓頭螺絲 M2×8 (半牙)	130025	O-Ring P4 3.8×1.9 VMQ60 土珠色 60度	230153	ATK V2 前輪座組 & THA後輪座	820017	4×6×0.3 調整墊片
110046	插銷 2×9.8(剖槽)	130049	O-Ring 12×1 黑色	230169	傘差齒箱組(改模一)	820018	5×7×0.1 調整墊片
110047	3×6×0.5 墊片	130059	O環 P3 2.8×1.9 30度(白色)	230154	MRX 齒箱組	820020	5×7×0.3 調整墊片
110049	六角圓頭螺絲 M3×5	210031	5.8×26拉桿頭	230157	MRX 馬達座組	820024	10×12×0.3 調整墊片
110052	六角沉頭 M3×10	210033	伺服機舵片組-長 (23T/25T)	230158	後避震架 & MRX 後背座	820030	CVD連接軸
110056	六角止付螺絲 M3×12	210053~1	傘差齒組 (NL-30%)	230159	插銷球頭 & 墊片組	820074	突緣螺帽 M4×5.5
110058	自攻十字沉頭螺絲 2×8	210057	避震上下蓋組	230161	前防撞板 & 後提把	820075	R扣 5.0(黑)
110059	插銷 1.5×7.8	210071	避震膠件組	230163	驅動齒&終傳齒 (30%)	820095	AKM 二驅輪軸
110060	六角止付螺絲 M3×2.6	210161	4.8 外六角球頭	230165	FR 前擔組	820152	電池防刮貼紙
110061	六角圓頭螺絲 M3×14	210235	活賽墊片組	230166	FR 配件組	820157	漸進式彈簧 26 (硬-紅)
110070	E扣 3.0	210267	CVD狗骨38.5 (壓PIN)(鑄刻)	230168	大小傘齒組(11-42&13-40)(30%)	820157	漸進式彈簧 28 (中-紫綠)
110071	插銷 1.6×9	210344	4.8 外六角球頭L	230171	擺臂組 B		
110073	六角沉頭 M3×16	210345	轉向柱 5×16 (黑)	230173	下擺臂座組B		
110078	六角沉頭 M3×18	210381	車殼支柱組	230174	轉向搖臂組		
110082	六角圓頭螺絲 M2×3	210510CR	大卡鉗組	310001	內六角公球頭 4.8×4.5		
110086	六角圓頭螺絲 M3×16	210625	5.8×6 球頭 L	310008	避震軸心 3×28 (化學鍊)		
110091	六角有頭螺絲 M3×40 (半牙)	210685	傘差接杯(短)	310027	板件內牙柱2.5		

026315